

LD-64 to Fisher Rosemount ROC/PLC Switch Settings & Connection Details

S3




Slave

S1



S2

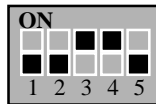

Master

S1



Only One Master
Per System

NOTES

LD-64 set for operation at 9600,8,E,1 (11 Bit Word).

Return leg of fibre ring not connected. Leave fibre optic protection cap's in place.

Open collector alarm output are available on terminals 6,7 and 8,9 to indicate fibre failures. These can be directly connected to the fibre failure input on the ROC. Use connection B&C,
 C = 0V to 7 or 9
 B = +12V to 6 or 8

Connections

