


Switch Settings & Connection Details

TD-32 Leased line to Hitachi CPU22-02 HB

TD-32

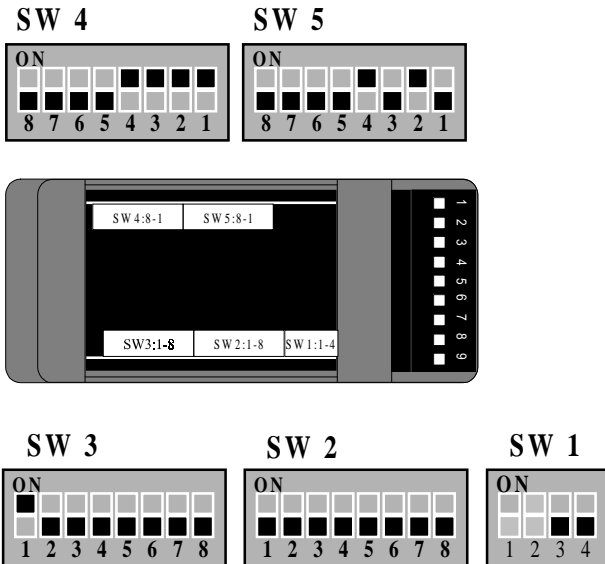

Notes

No Changes are required to the default AT setting on the TD-32.



The Hitachi CPU-22 02 HB will require that SW1, 4 should be set to ON.

SW 1



Originating

Answering

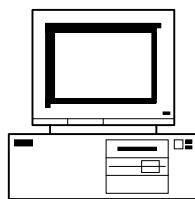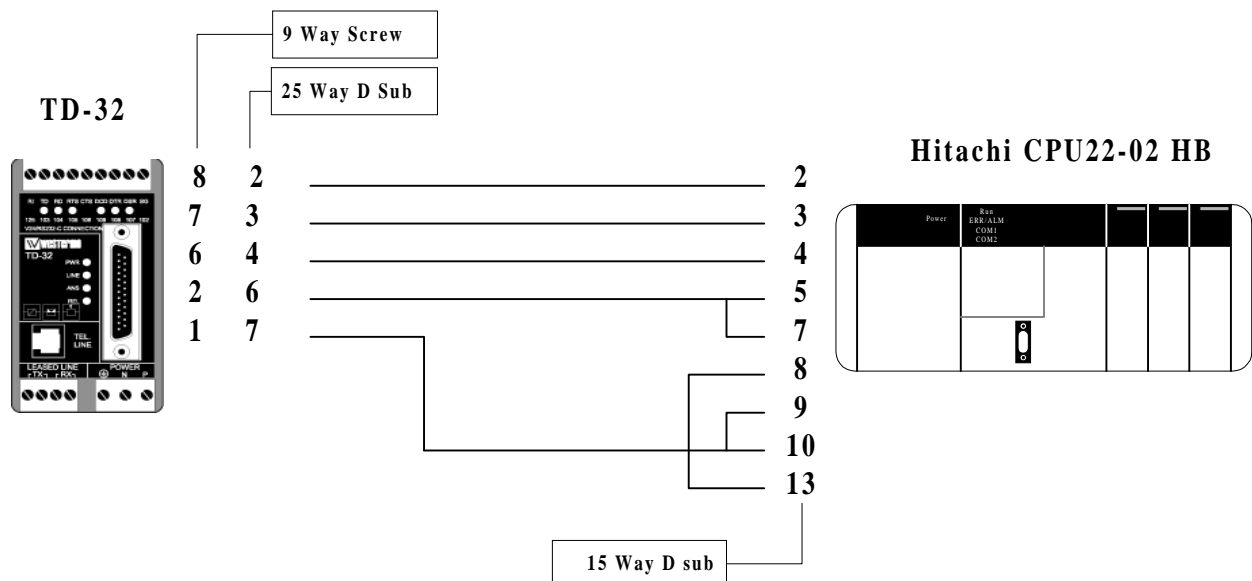

IBM Compatible

A standard 9 to 25 modem lead between the PC and the TD-32 at the host end.

