



# Signal Connections Configuration 216


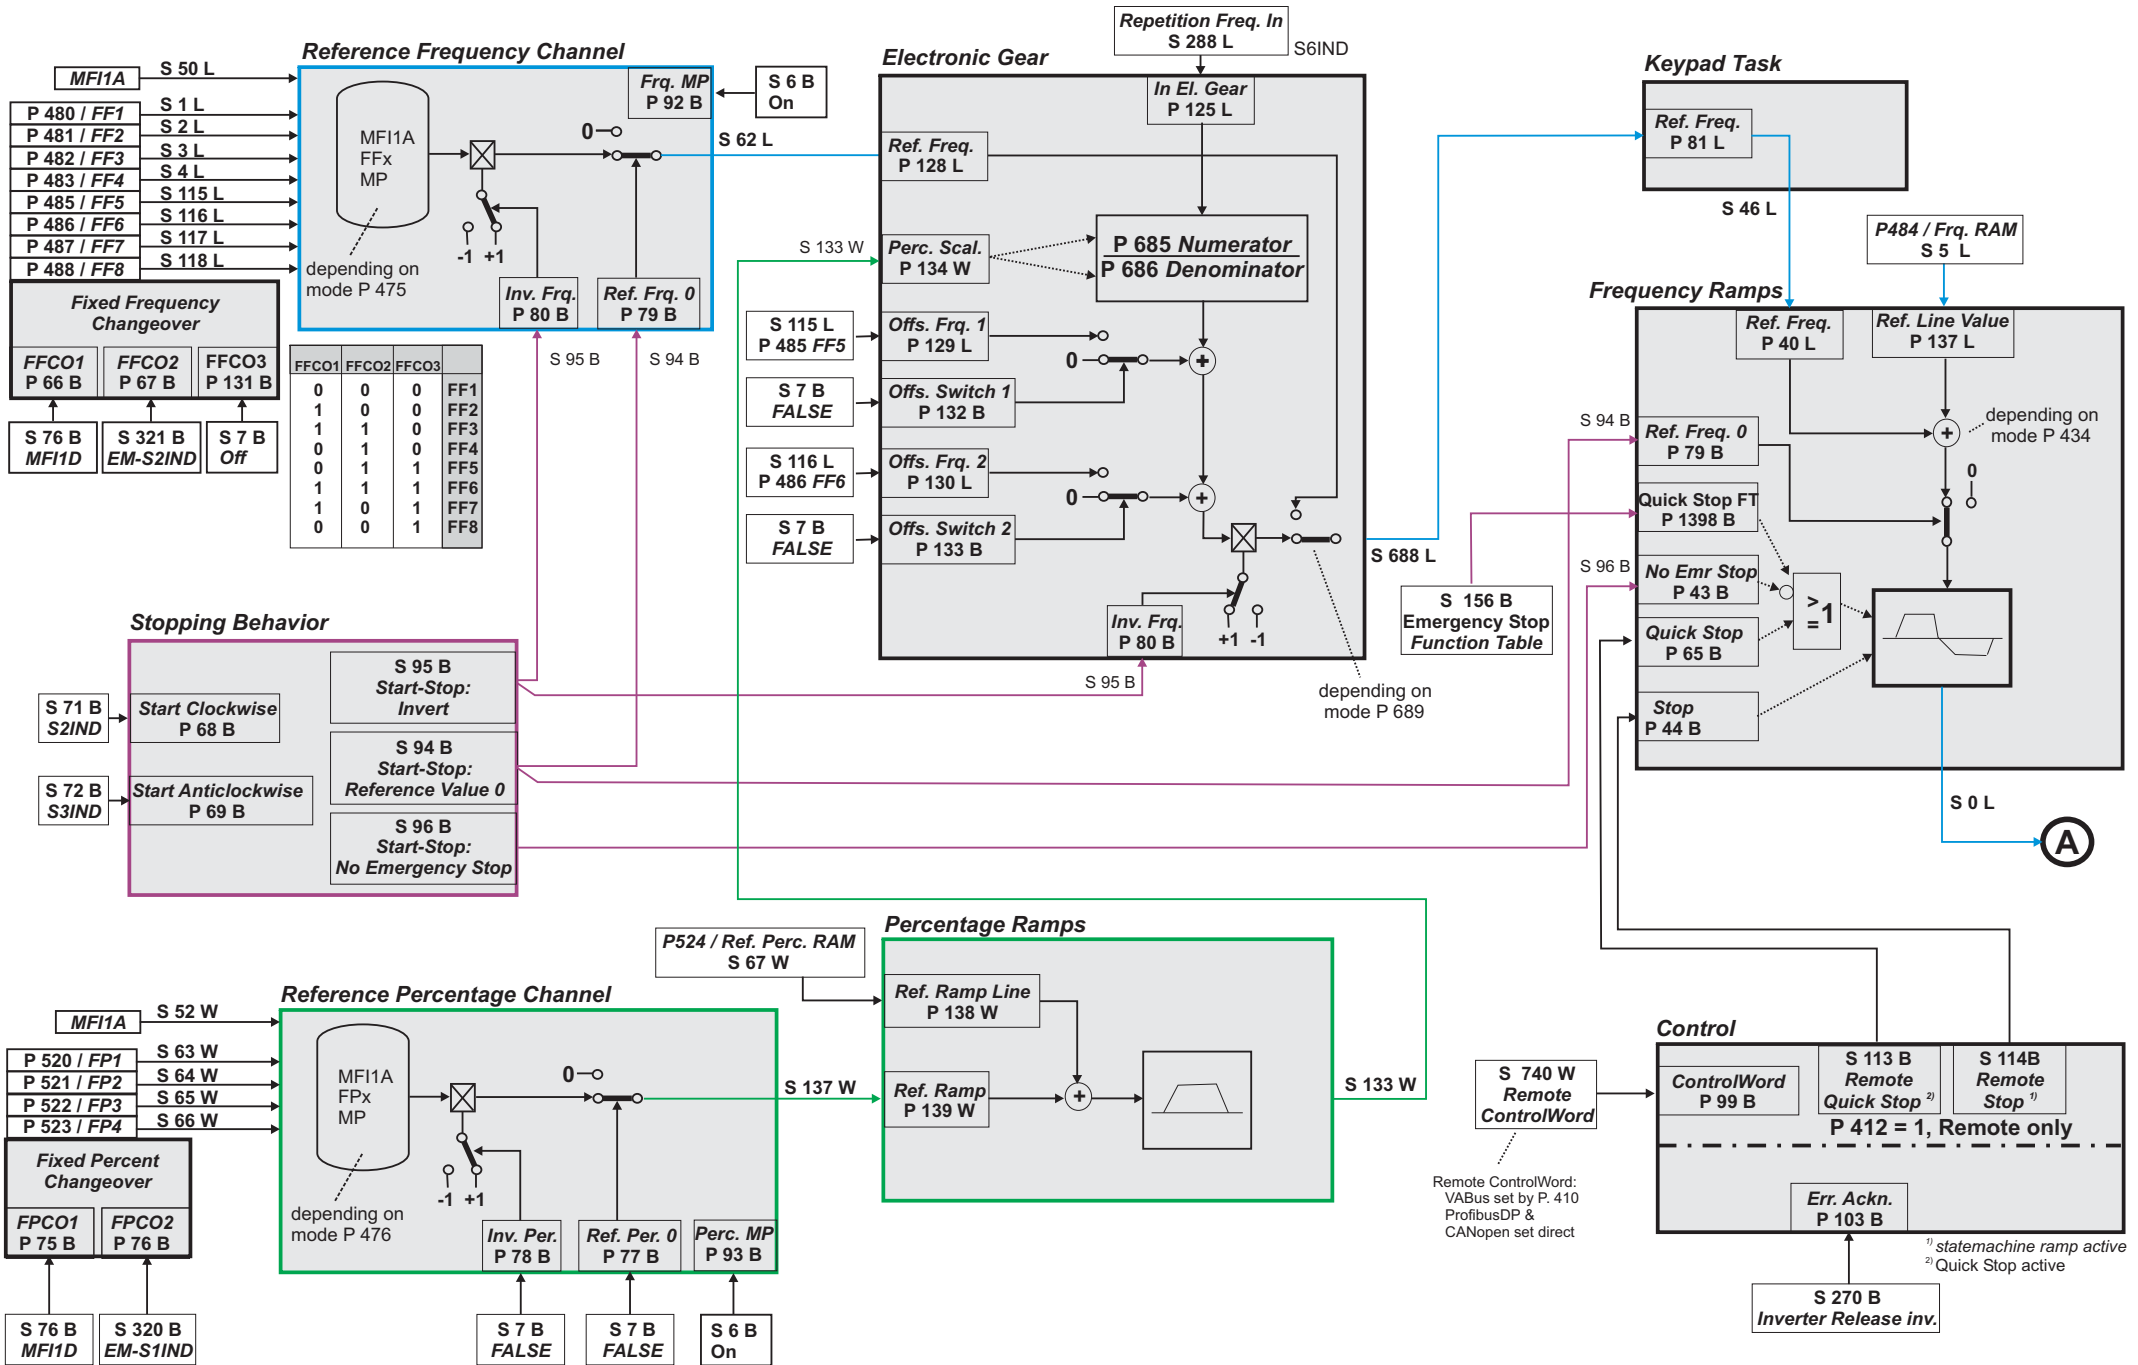


# Signal Connections Configuration 216

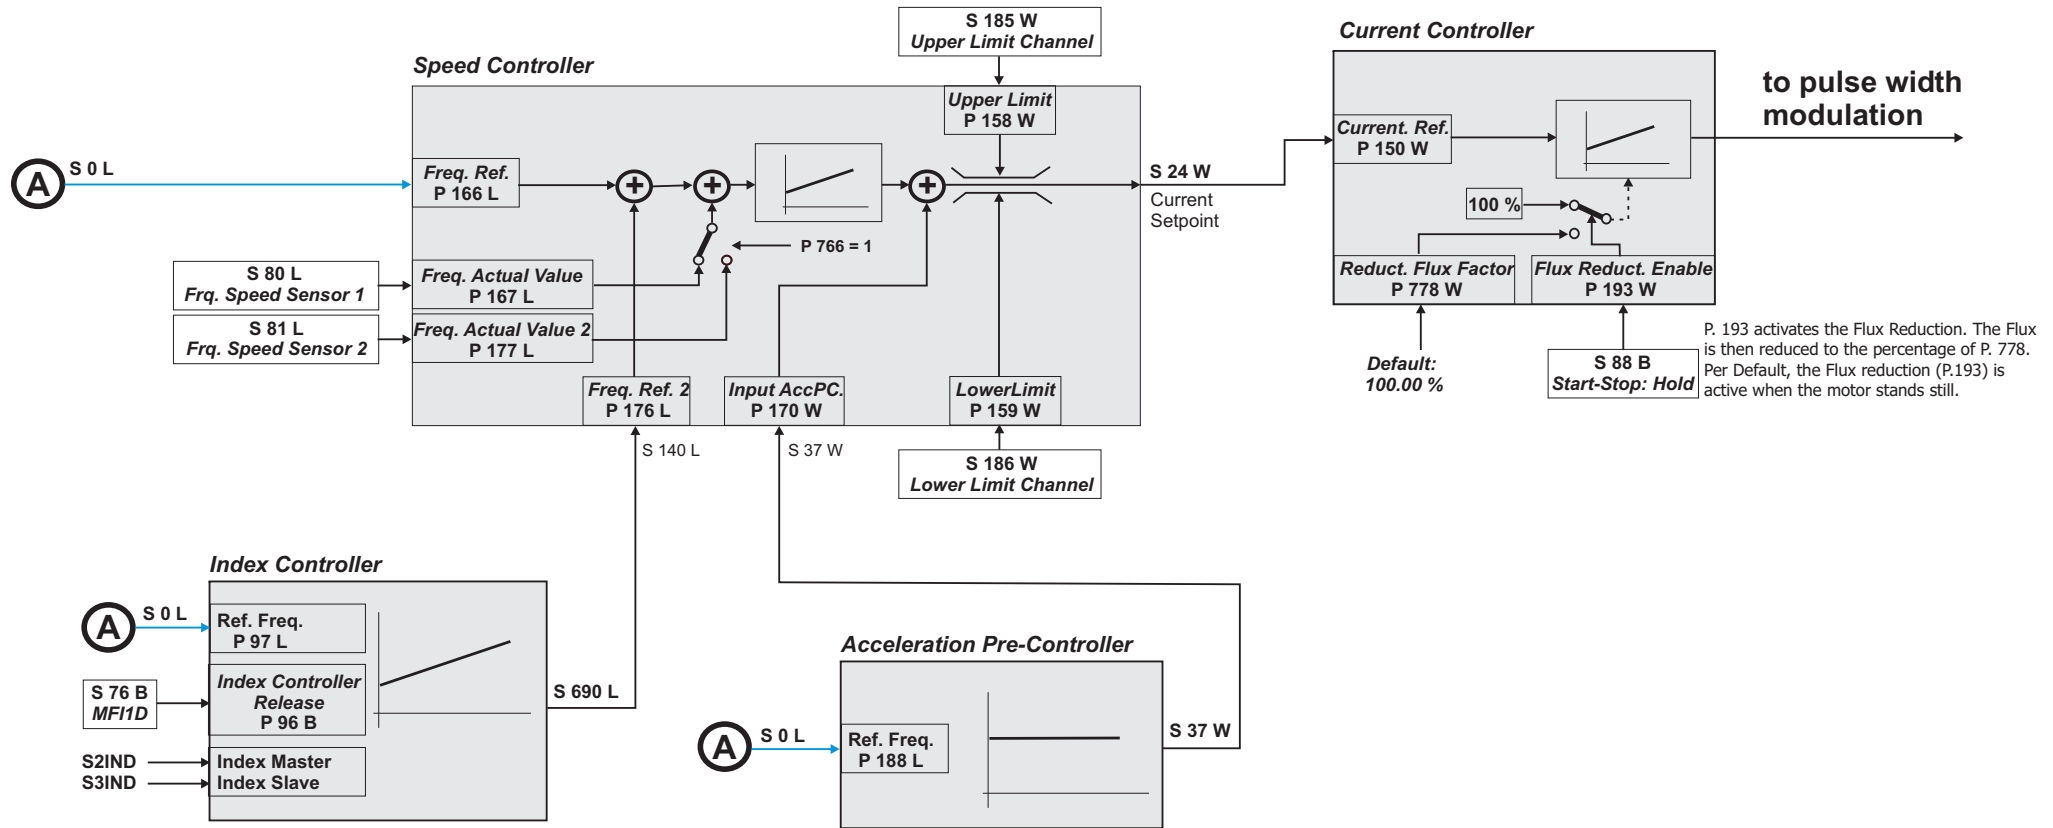

P. 193 activates the Flux Reduction. The Flux is then reduced to the percentage of P. 778. Per Default, the Flux reduction (P.193) is active when the motor stands still.

Inverter Release - S 70 B / Inverter Release invert - S 270 B  
 S2IND - S 71 B / S2IND invert - S 271 B  
 S3IND - S 72 B / S3IND invert - S 272 B  
 S4IND - S 73 B / S4IND invert - S 273 B  
 S5IND - S 74 B / S5IND invert - S 274 B  
 S6IND - S 75 B / S6IND invert - S 275 B  
 MF1D - S 76 B / MF1D invert - S 276 B

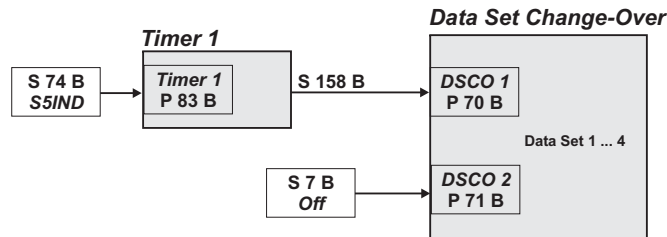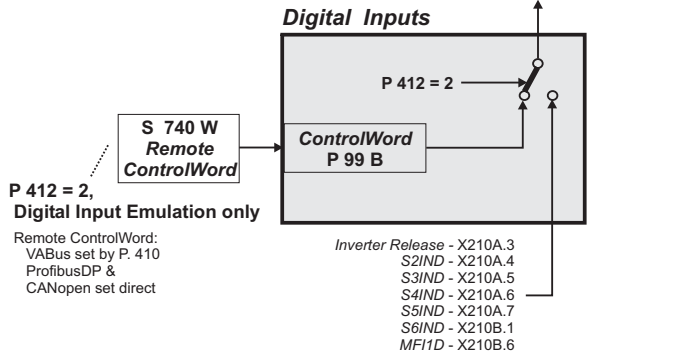

## Digital Output Functions

