



¹⁾statemachine ramp active
²⁾Quick Stop active

Signal Connections Configuration 460

