


# Connection to the U-series (30 to 750 W) Models (Using an Incremental Encoder)

## Dedicated Driver Cable: R88A-CPU00□M2

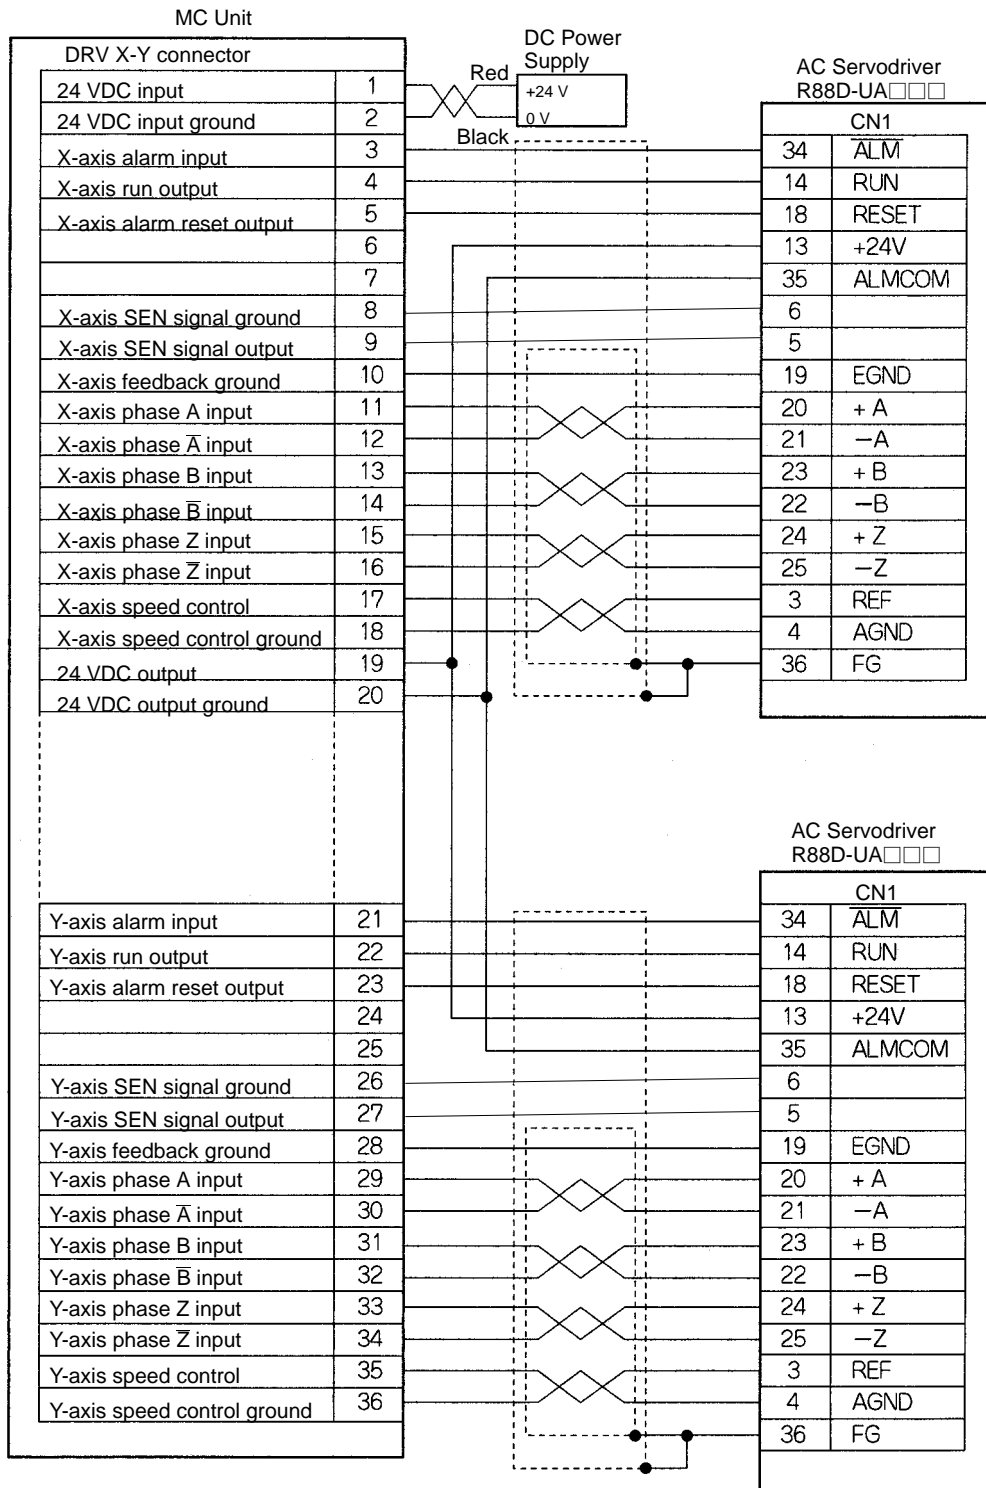

**Note** In the case of the incremental encoder, terminals 5 and 6 on the Servodriver side are connected. However, this can be ignored. Users are not required to connect them.