



- Note 1.** Incorrect signal wiring can cause damage to Units and the Servo Driver.
- Note 2.** Leave unused signal lines open and do not wire them.
- Note 3.** Connect the terminals and wiring marked by asterisks (\*) when using an absolute encoder.
- Note 4.** This wiring diagram is for the X axis only. If the other axis is to be used, connect to the Servo Driver in the same way.
- Note 5.** Be sure to short (in the connector) any unused NC input terminals in the CV500-221/421-E's I/O connector.
- Note 6.** Use the RUN signal to set whether the Servo can be turned ON/OFF.