


# For C200H-NC112 Use


XW2Z-□□□J-A1  
 XW2Z-□□□J-A4  
 (R88D-UEP□□□)

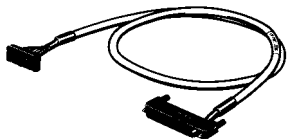

## Connector

Position Control  
 Unit side

 Servo Terminal  
 Unit side




FCN-367J040-AU/F  
 (Fujitsu)

XG4M-2630-T

## Wiring Diagram XW2Z-□□□J-A1

C200H-NC112  
 (PCB I/O connector  
 with 40 poles)

XW2B-20J6-1B  
 (XG4M-2630)

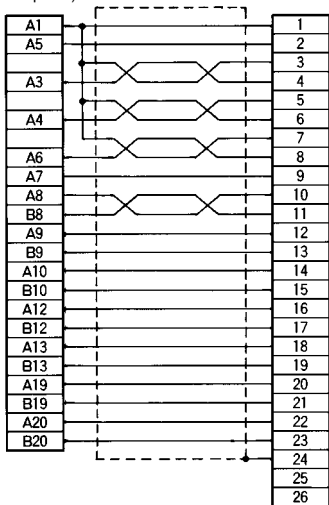

## XW2Z-□□□J-A4

C200H-NC112  
 (PCB I/O connector  
 with 40 poles)

XW2B-20J6-1B  
 (XG4M-2630)

