

# XW2Z-□□□H-□ Connecting Cables

XW2Z-□□□H-3	<p>XW2B-20G□</p> <p>Wd N (CN2)                      Wd N+1 (CN3)                      Wd N+2 (CN4)</p>
XW2Z-□□□H-2	<p>XW2B-40G□                      XW2B-20G□</p> <p>Wd N (CN2)                      Wd N+1 (CN2)                      Wd N+2 (CN3)</p>
XW2Z-□□□H-1	<p>XW2B-60G□</p> <p>Wd N (CN2)                      Wd N+1 (CN2)                      Wd N+2 (CN2)</p>

# XW2Z-□□□H-□G/G79-□□□C-□□□-□□□ Connecting Cables

G79-□□□C-□□ □-□□□	<p>XW2B-20G□</p> <p>Wd N (CN2)                      Wd N+1 (CN3)                      Wd N+2 (CN4)</p>
XW2Z-□□□H-2G	<p>XW2B-40G□                      XW2B-20G□</p> <p>Wd N (CN2)                      Wd N+1 (CN2)                      Wd N+2 (CN3)</p>
XW2Z-□□□H-1G	<p>XW2B-60G□</p> <p>Wd N (CN2)                      Wd N+1 (CN2)                      Wd N+2 (CN2)</p>

**Note:** The XW2Z-□□□H-□G I/O signal arrangement is oriented the same as the connector cable for the G79 I/O Relay Terminal.