
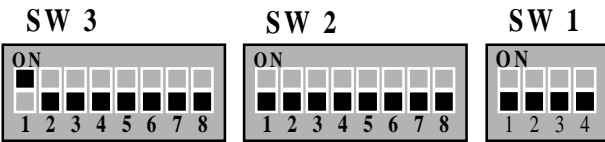
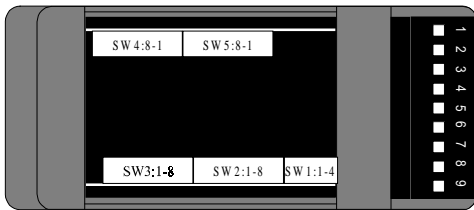





## Switch Settings & Connection Details

### Klockner Moeller PS4 and PS416


#### TD-32 to PS4

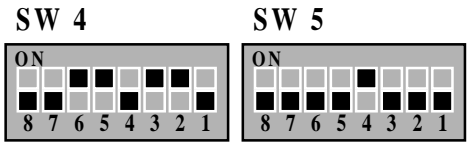

#### TD-32 to PS416

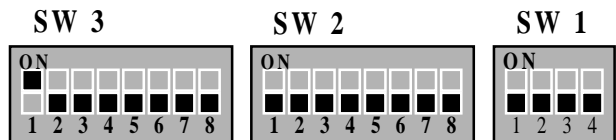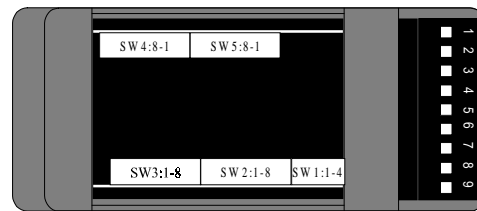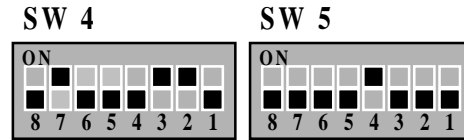

### Connection Details

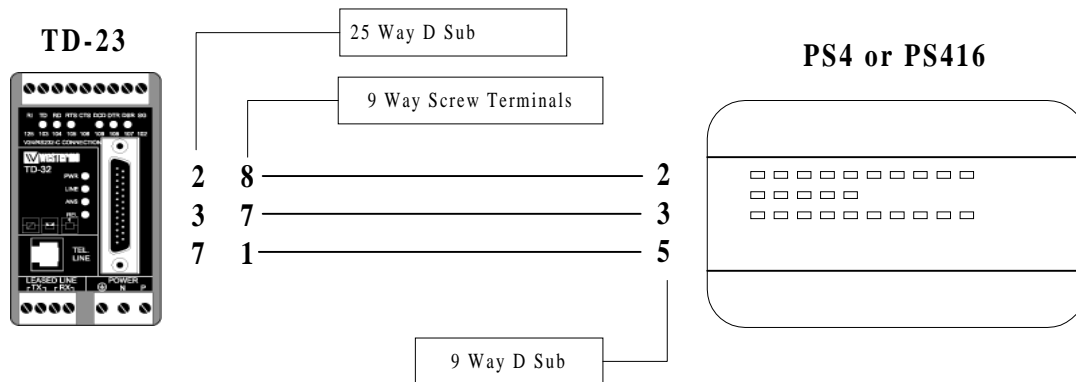

### Notes

The following AT commands are necessary for the correct operation of the TD-32.

**AT&F &K0 W1 &W0**