



## Installation Instructions


An optional Tethered Stylus is available for use on any of the Falcon 4400 series models. The Tether attaches the stylus to the Falcon unit, preventing the stylus from accidentally becoming lost or misplaced.

If your Falcon did not come with a Tethered Stylus, it can be easily installed.

To install a Tethered Stylus on the Falcon 44xx complete the following steps:

1. Turn the Falcon face-down. Ensure that power is OFF.
2. Using a Phillips screwdriver, remove the 6 mm screw at the bottom of the Stylus holder.
3. Use the longer 16 mm screw included with the Tethered Stylus kit to attach the Tethered Stylus to the Falcon.
4. Slide the other end of the Tether around the Stylus, if not already attached.

This completes Installation of the Tethered Stylus.

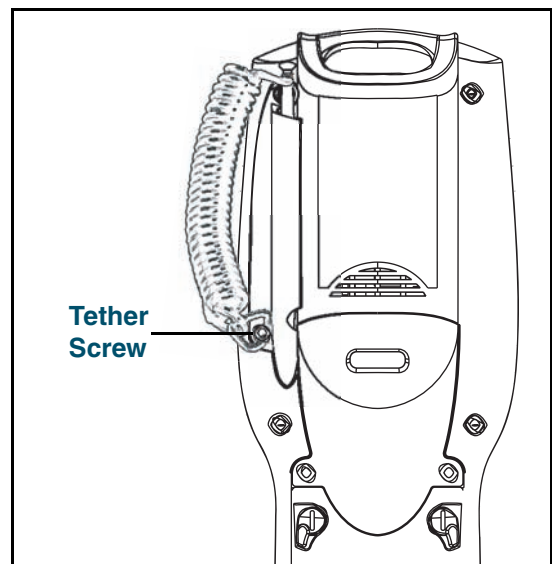

## Removing a Tethered Stylus

If you want to remove the Tether from your Falcon 44xx, complete the following steps:

1. Turn the Falcon face down. Ensure that power is OFF.
2. Using a Phillips screwdriver, remove the 16 mm screw at the bottom of the Stylus holder that attaches the Tether to the PDT.
3. Use the shorter 6 mm screw included with your Falcon to reattach the Stylus Holder to the Falcon.



**Do not use the 16 mm long screw that came with the Tethered Stylus without the Tether. Damage to internal components could occur if the screw is used without the Tether, since the screw is longer than the standard 6 mm screw used without the Tether.**

