

nected incorrectly, the loads may not operate correctly.

Note Do not reverse the polarity of

the load power supply. If the

load power supply is con-

The COM terminals are internally connected, but they all must be wired.