



The COM terminals and 0-V outputs are internally connected, but they all must be wired.

Note Do not reverse the polarity of the load power supply. If the load power supply is connected incorrectly, the loads may not operate correctly.