



Note: Signals are input to the PLC Input Unit or Remote Terminal with isolated contacts. Numbers 00 to 15 are the input numbers for the corresponding PLC Input Unit or Remote Terminal.



Note: Signals are input to the PLC Input Unit or Remote Terminal with isolated contacts. Numbers 00 to 15 are the input numbers for the corresponding PLC Input Unit or Remote Terminal.