


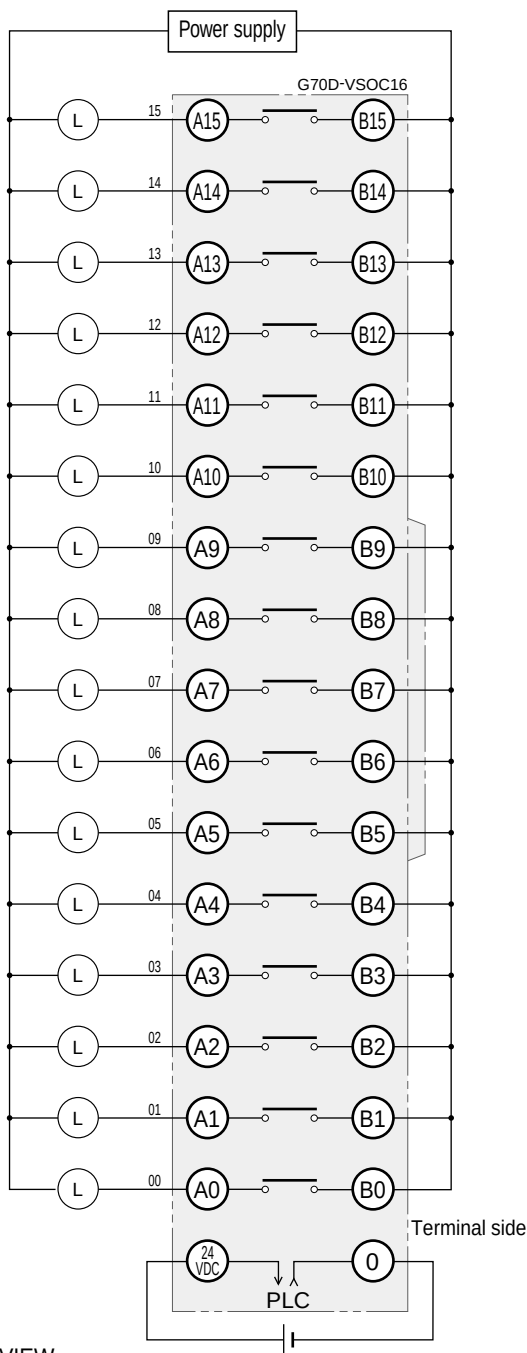

TOP VIEW

Note 1: All contacts are independent. They are isolated from the PLC Output Unit or the Remote Terminal. Numbers 00 to 15 are the output numbers for the corresponding PLC Output Unit or Remote Terminal.

2: Use a G6D-4-SB Shorting Bar to short-circuit across terminals if required.