


● Wiring

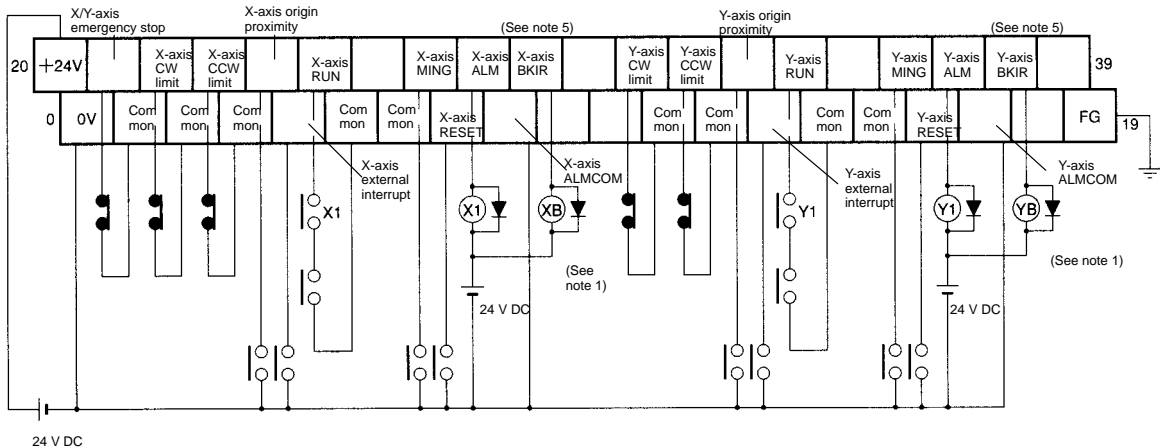

- Note 1.** The XB contact is used to turn ON/OFF the electromagnetic brake.
- Do not connect unused terminals.
 - The 0 V terminal is internally connected to the common terminals.
 - The following crimp terminal is applicable: R1.25-3 (round with open end).
 - Allocate BKIR (Braking Lock) to CN1 pin 27.