


# For H Series Use

XW2Z-□□□J-B3

## Wiring Diagram

R88D-H□□□  
(XM2A-3701)

XW2B-□□□J6-□B  
(XG4M-2030)

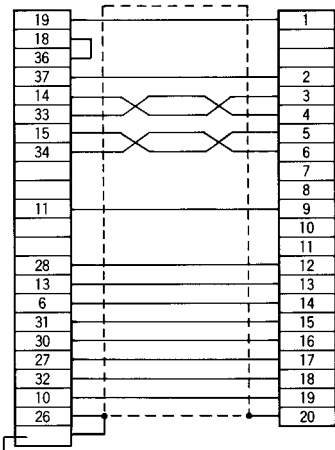


Hood cover

## Connector

Servo Driver side

Servo Terminal  
Unit side

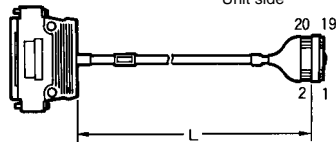

XM2A-3701 Plug  
XM2S-3711 Hood

XG4M-2030-T