



**DRAGON™**

**Reference Manual**

**DLL6000-R/OM6010-R Compatibility**

AUDIN - 7 bis rue de Tinquex - 51100 Reims - France

Tel : 03.26.04.20.21 - Fax : 03.26.04.28.20

Web : <http://www.audin.fr> - Email : [info@audin.fr](mailto:info@audin.fr)





**DRAGON™**

**REFERENCE MANUAL**

**DLL6000-R/OM6010-R COMPATIBILITY**





DATALOGIC S.p.A.  
Via Candini 2  
40012 - Lippo di Calderara di Reno  
Bologna - Italy

DRAGON™ REFERENCE MANUAL  
DLL6010-R/OM6010-R Compatibility

Ed.: 10/2002

This manual refers to  
compatibility with DLL6010-R/OM6010-R  
software version: **SW 1.08**

ALL RIGHTS RESERVED

Datalogic reserves the right to make modifications and improvements without prior notification.

Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material.

Product names mentioned herein are for identification purposes only and may be trademarks and or registered trademarks of their respective companies.

© Datalogic S.p.A. 2002

Rev. A

# CONTENTS

---

	<b>HOW TO USE THIS MANUAL</b> .....	vi
<b>1</b>	<b>INITIAL SETUP</b> .....	1
1.1	Set Compatibility.....	1
1.2	DLL6000-R/OM6010-R Compatibility SetUp.....	2
1.2.1	Using Multiple Guns With Same Cradle.....	5
1.2.2	Gun Default Configuration.....	6
1.2.3	Cradle Default Settings .....	7
<b>2</b>	<b>CONFIGURATION</b> .....	8
	RS232 PARAMETERS.....	10
	WEDGE PARAMETERS.....	14
	PEN EMULATION PARAMETERS .....	19
	CRADLE OPERATING PARAMETERS.....	23
	BATTERY CHARGING .....	26
	NETWORK PARAMETERS .....	28
	GUN OPERATING PARAMETERS .....	31
	READING PARAMETERS .....	35
	DECODING PARAMETERS .....	39
	GUN DISPLAY PARAMETERS .....	42
	CODE SELECTION.....	45
<b>3</b>	<b>REFERENCES</b> .....	55
3.1	RS232 Parameters.....	55
3.1.1	Handshaking .....	55
3.1.2	Radio RX Lock .....	55
3.1.3	RX Timeout .....	56
3.2	Wedge Parameters .....	56
3.2.1	IBM AT - Alt Mode Interface .....	56
3.2.2	Inter-character Delay.....	56
3.3	Pen EMULATION Parameters .....	57
3.3.1	Minimum Output Pulse.....	57
3.3.2	Overflow .....	57
3.3.3	Output and Idle Levels .....	58
3.4	Cradle and Gun Operating Parameters .....	58
3.4.1	ACK from Host .....	58
3.4.2	Radio Timeout.....	59

3.4.3	Output Data Format.....	59
	Header/Terminator Selection.....	60
	Gun/Cradle Address Stamping.....	61
	Gun/Cradle Address Delimiter.....	61
	Time Stamping Format.....	61
	Time Stamping Delimiter.....	61
	Code Identifier.....	62
3.5	Reading Parameters.....	62
3.5.1	Trigger Signal.....	62
3.5.2	Trigger Timeout.....	63
3.5.3	Reads per Cycle.....	63
3.5.4	Safety Time.....	63
3.5.5	Single-Store.....	63
3.5.6	Power-Off Timeout.....	64
3.6	Decoding Parameters.....	64
3.6.1	Ink-Spread.....	64
3.6.2	Overflow Control.....	65
3.6.3	Interdigit Control.....	65
3.7	GUN Display Parameters.....	65
3.7.1	Display Mode.....	65
3.8	Software Release.....	66
<b>4</b>	<b>COMMUNICATION AND MESSAGE FORMATTING.....</b>	<b>67</b>
4.1	Messages from Host to Gun.....	67
4.1.1	Cursor Control.....	68
4.1.2	Font Selection.....	69
4.1.3	Clearing Display.....	69
4.1.4	LED and Beeper Control.....	70
4.1.5	Setting RTC.....	70
4.2	Messages from Gun Command Keys.....	71
<b>A</b>	<b>HOST CONFIGURATION STRINGS.....</b>	<b>73</b>
<b>B</b>	<b>C6010 CONFIGURATION.....</b>	<b>82</b>
<b>C</b>	<b>HEX AND NUMERIC TABLE.....</b>	<b>83</b>

# HOW TO USE THIS MANUAL

---

This volume was written for the sole purpose of providing complete configuration for DRAGON™ M readers and OM-DRAGON™ cradles used as DLL6000-R/OM6010-R compatible readers and cradles for existing DLL6000-R/OM6010-R applications.

**If you are not using these products as DLL6000-R/OM6010-R compatible readers/cradles, then use the Standard Reference Manual for configuration.**

Your DRAGON™ M/OM-DRAGON™ is supplied with its own Quick Reference Manual which provides connection diagrams, reading diagrams, basic application parameter settings, default values, and specific technical features. You can use either your reader's Quick Reference Manual or this Manual for initial configuration in order to set the default values and select the interface for your application.

This manual can be used for complete setup and configuration of your DRAGON™ M reader and OM-DRAGON™ cradle as DLL6000-R/OM6010-R compatible products.

**To use this manual for initial setup see chapter 1.**

If you wish to change the default settings, this manual provides complete configuration of your reader in an easy way.

**To configure your reader:**

- 1) Open the folded page in Appendix C with the hex-numeric table and keep it open during the device configuration.
- 2) Read the **Enter Configuration** code ONCE, available at the top of each page of configuration.
- 3) Modify the desired parameters in one or more sections following the procedures given for each group.
- 4) Read the **Exit and Save Configuration** code ONCE, available at the top of each page of configuration.

Reference notes describing the operation of the more complex parameters are given in chapter 3.

For communication between Host and gun, refer to chapter 4.

### **DL Sm@rtSet**

DL Sm@rtSet is a Windows-based utility program providing a quick and user-friendly configuration method via the RS232 interface.

It also allows upgrading the software of the connected device (see the DL Sm@rtSet User's Manual for more details).

### **Sending Configuration Strings from Host**


An alternative configuration method is provided in Appendix A using the RS232 interface. This method is particularly useful when many devices need to be configured with the same settings. Batch files containing the desired parameter settings can be prepared to configure devices quickly and easily.



# 1 INITIAL SETUP

---

To start the system up, perform the operations represented in the flow-chart below, following the given sequence.

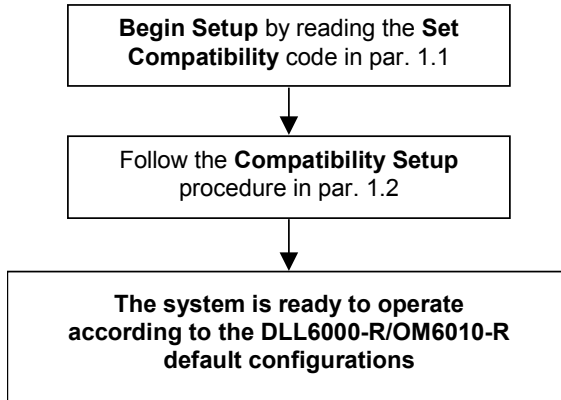

## 1.1 SET COMPATIBILITY

Set DLL6000-R compatibility



The reader will automatically be switched off and restarted and four high tones will be emitted.

At this point, the DRAGON™ M scanner is ready to be configured using the DLL6000-R procedure in par. 1.2.

---

To restore the DRAGON™ M standard configuration read the following code, then follow the DRAGON™ M configuration procedure.






Restore DRAGON™ M standard configuration



## 1.2 DLL6000-R/OM6010-R COMPATIBILITY SETUP

When the cradle is connected and powered, configure the gun by reading the following codes in the given sequence and follow the instructions.


**Note:** Open the folded page at the end of this Manual for the Numeric code selections.

1. **Restore DLL6000-R default**  
  
 Default parameter settings are listed in par. 1.2.2.
2. **Enter configuration**  

3. **Set Date**  
  
 +  
 six digits for Day, Month and Year (DDMMYY).
4. **Set Time**  
  
 +  
 four digits for Hours and Minutes (HHMM).
5. **Set Gun Address**  
  
 +  
 three digits for the DLL6000-R Address (from 000 to 126).

**All guns used in the same area must have different addresses.**

**Exit and Save configuration**

6.



7. Read the **Bind** code to pair the DLL6000-R to the OM6010-R:  
The reader is dedicated to the cradle. Any previously **bound** reader will be excluded.

*To connect several guns to the same cradle see the following paragraph 'Using Multiple Guns with Same Cradle'.*

**Bind**

The green LED on the gun will blink: the scanner is ready to be inserted into the cradle.

8. Firmly insert the scanner into the cradle within 10 seconds, a beep will be emitted, signaling that the cradle has been paired to the gun.



9. Read the Restore Cradle default code

**Restore Cradle default**

Default parameter settings are listed in par.1.2.3.

**10.** Read the Interface Selection code for your particular application:

**RS232 Interface**



**PEN EMULATION Interface**



**WEDGE Interface**

IBM AT or PS/2 PCs



IBM AT - Alt Mode \*




IBM XT




IBM SURE1



IBM Terminal 3153



**IBM Terminals: 31xx, 32xx, 34xx, 37xx**




make-only keyboard



KEY TRANSMISSION

**or**



make-break keyboard



KEYBOARD TYPE

advanced keyboard



typewriter keyboard



You can change any interface selection by simply reading another interface selection code.

RS232 and WEDGE interface selection codes automatically restore header and terminator default values (see par. 3.4.3).

\* See par. 3.2.1.

11.

Test



123456

- Test O.K.:** two short beeps  
**Test Failure:** no beep or a long high-tone beep followed by a long low-tone beep.

### 1.2.1 Using Multiple Guns With Same Cradle

If you want to use several guns associated with the same cradle, you must first **Bind** the cradle with one of the guns (see the previously described configuration procedure).

Successive guns can be associated with this same cradle by following the configuration procedure substituting the Bind command with **Join**.

In this case the procedure ends with step **8**.

7.

Join



#### WARNING

If the cradle is not **Bound** to a gun, its address assumes a random value which can cause conflicts and malfunctions to other cradles within its range.

## 1.2.2 Gun Default Configuration

<b>Reading Parameters</b>	
Trigger Signal	<i>level</i>
Trigger Timeout	<i>10 sec.</i>
Reads per Cycle	<i>one</i>
Safety Time	<i>.5 sec</i>
Single-Store	<i>disabled</i>
Power-off Timeout	<i>8 hours</i>
Beeper Intensity	<i>high</i>
Beeper Tone	<i>2</i>
Good Transmission Beep	<i>enabled</i>
<b>Decoding Parameters</b>	
Ink Spread	<i>enabled</i>
Overflow Control	<i>enabled</i>
Interdigit Control	<i>enabled</i>
Decoding Safety	<i>one read</i>
<b>Gun Operating Parameters</b>	
Code Identifier	<i>disabled</i>
Time Stamping Format	<i>disabled</i>
Time Stamping Delimiter	<i>none</i>
ACK from Host	<i>disabled</i>
* Radio Timeout	<i>1/2 sec.</i>
<b>Display parameters</b>	
Font Size	<i>small</i>
Display Timeout	<i>8 sec.</i>
Backlight	<i>off</i>
Contrast	<i>normal</i>
Display Mode	<i>normal</i>
<b>Code Selection</b>	
EAN 8/EAN 13 / UPC A/UPC E	<i>Check digit transmission, no conversions.</i>
Interleaved 2/5	<i>Check digit control and transmission, variable length code: 4-99 characters.</i>
Standard Code 39	<i>No check digit control, variable length code: 1-99 characters.</i>
Code 128	
Code 93; Codabar	<i>Disabled</i>

\* The restore default command does not affect the selection made for this parameter.

### 1.2.3 Cradle Default Settings

<b>RS232 Parameters</b>	
Baud Rate	9600
Parity	disabled
Data Bits	8
Stop Bit	1
Handshaking	disabled
Radio RX Lock	disabled
Inter-character Delay	disabled
Rx Timeout	5 sec.
<b>Pen Emulation Parameters</b>	
Conversion to Code 39 and Code 128	Conversion to Code 39
Output Level	normal
Idle Level	normal
Minimum Output Pulse	600 $\mu$ s
Overflow	medium
<b>Wedge Parameters</b>	
Keyboard Nationality	USA
Caps Lock	off
Delays	disabled
Num Lock	off
Control Character Emulation	Ctrl+Shift+Key
<b>Cradle Operating Parameters</b>	
* Header	none
* Terminator	CR-LF (RS232), CR (Wedge)
Address Stamping	disabled
Address Delimiter	disabled
<b>Battery Parameter</b>	
Battery Type	auto-detect
<b>Network Parameter</b>	
Echelon Network	disabled

\* The restore default command does not affect the selection made for these parameters.


## 2 CONFIGURATION

---

The DLL6000-R and OM6010-R default parameters can be changed by following the procedure below.

1. Open the folded page in Appendix C with the Hex-Numeric table and keep it open during configuration.
2. Go to the section of the group to modify.
3. Follow the procedure for that section.

System parameters are grouped according to the following figure:

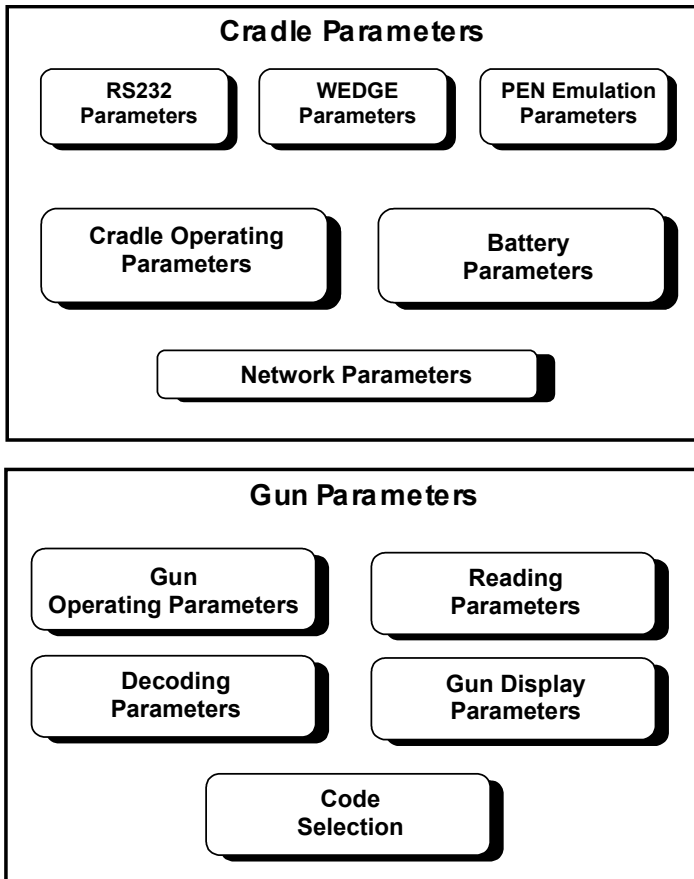



# **CRADLE**




# **PARAMETERS**

# RS232 PARAMETERS

PARAMETERS	DEFAULT
BAUD RATE	9600
PARITY	disabled
DATA BITS	8
STOP BITS	1
HANDSHAKING	disabled
RADIO RX LOCK	disabled
INTER-CHARACTER DELAY	disabled
RX TIMEOUT	5 sec.

---

## TO CHANGE THE DEFAULT VALUES


1. Read the **Enter Configuration** code ONCE, available at the top of each page.
2. Read configuration codes from the desired groups   
 = Choose only one code from each selected group  
 = Follow the procedure given for this code group
3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.



---

BAUD RATE

150 baud



300 baud



600 baud



1200 baud



2400 baud



4800 baud



9600 baud



19200 baud



---

PARITY

disabled



odd parity



even parity





# RS232

## DATA BITS

7 bits



8 bits




9 bits



## STOP BITS

1 stop bit




2 stop bits



## HANDSHAKING

disabled



hardware (RTS/CTS)



software (XON/XOFF)



RTS always ON



See par. 3.1.1 for details.

**RADIO RX LOCK**

disabled



enabled



See par. 3.1.2 for details.

**INTER-CHARACTER DELAY**delay between characters  
transmitted to Host**Read 2 numbers from the table where:**

00 = DELAY disabled

01-99 = DELAY from 1 to 99 milliseconds

**RX TIMEOUT**

timeout control in reception from Host

**Read 2 numbers from the table where:**

00 = TIMEOUT disabled

01-99 = TIMEOUT from .1 to 9.9 seconds




See par. 3.1.3 for details.

# WEDGE PARAMETERS

PARAMETERS	DEFAULT
KEYBOARD NATIONALITY	USA
CAPS LOCK	OFF
NUM LOCK	OFF
INTER-CHARACTER DELAY	disabled
INTER-CODE DELAY	disabled
CONTROL CHARACTER EMULATION	Ctrl+Shift+Key

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of each page.
2. Read configuration codes from the desired groups   
 = Choose only one code from each selected group  
 = Follow the procedure given for this code group
3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.



---

**KEYBOARD NATIONALITY****NOTE**

When IBM AT - Alt Mode Interface is selected, it is not necessary to set the Keyboard Nationality.

English



German




Swedish



Spanish



Japanese



French




Italian



USA



Belgian



**KEYBOARD NATIONALITY**

(continued)


**NOTE**

When IBM AT - Alt Mode Interface is selected, it is not necessary to set the Keyboard Nationality.


Russian (Cyrillic)




Yugoslavian



Czechoslovakian



Russian (Latin)



Hungarian



Romanian

**CAPS LOCK**

Caps lock OFF



Caps lock ON



Select the appropriate code to match your keyboard caps lock status.



**WEDGE****NUM LOCK**

Toggle Num lock



use if Num lock key status is OFF

Num lock unchanged



use if Num lock key status is ON

This selection is used together with the Alt Mode interface selection for AT PCs. It changes the way the Alt Mode procedure is executed, therefore it should be set to the same condition as used by your keyboard. In this way the device will execute the Alt Mode procedure correctly for your application.

**INTER-CHARACTER DELAY**

delay between characters  
transmitted to Host

**Read 2 numbers from the table where:**

00 = DELAY disabled

01-99 = DELAY from **1** to **99** milliseconds

For more details, see par. 3.2.2.

**INTER-CODE DELAY**

delay between codes  
transmitted to Host

**Read 2 numbers from the table where:**

00 = DELAY disabled

01-99 = DELAY from **0.1** to **9.9** seconds



---

CONTROL CHARACTER EMULATION

Ctrl + Shift + Key



Ctrl + Key



# PEN EMULATION PARAMETERS

PARAMETERS	DEFAULT
<input type="text" value="OPERATING MODE"/>	interpret
<input type="text" value="MINIMUM OUTPUT PULSE"/>	600 $\mu$ s
<input type="text" value="CONVERSION TO CODE 39 AND CODE 128"/>	code 39
<input type="text" value="OVERFLOW"/>	medium
<input type="text" value="OUTPUT LEVEL"/>	normal
<input type="text" value="IDLE LEVEL"/>	normal

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of each page.

2. Read configuration codes from the desired groups



= Choose only one code from each selected group

3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.

## PEN EMULATION

---

The values of the operating mode parameter are complete commands and do not require reading the Enter and Exit configuration codes.

---

### OPERATING MODE

interpret mode



Interprets commands without sending them to the decoder.

transparent mode



sends commands to the decoder without interpreting them.



# PEN EMULATION

## MINIMUM OUTPUT PULSE

high resolution code emulation



low resolution code emulation

See par. 3.3.1 for details.

## CONVERSION TO CODE 39 AND CODE 128

enable conversion to Code 39



converts all codes read into Code 39 format.

enable conversion to Code 128



converts all codes read into Code 128 format.



## PEN EMULATION

---

### OVERFLOW

narrow



medium



wide



See par. 3.3.2 for details.

---

### OUTPUT LEVEL

normal

(white = logic level 0)



inverted

(white = logic level 1)



See par. 3.3.3 for details.

---

### IDLE LEVEL

normal

(black level)



inverted





(white level)



See par. 3.3.3 for details.




---

# CRADLE OPERATING PARAMETERS

PARAMETERS	DEFAULT
 HEADER	no header
 TERMINATOR	RS232: CR-LF WEDGE: CR
 ADDRESS STAMPING	disabled
 ADDRESS DELIMITER	disabled

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of each page.
2. Read configuration codes from the desired groups   
 = Choose only one code from each selected group  
 = Follow the procedure given for this code group
3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.




## HEADER

no header



one character header



two character header



three character header



four character header



## TERMINATOR

no terminator



one character terminator



two character terminator




three character terminator



four character terminator



After selecting the desired Header/Terminator code, read the character(s) from the HEX table.

EXAMPLE: <sup>four character header</sup> + 41 + 42 + 43 + 44 = Header **ABCD**

For more details about default and WEDGE Interface Extended Keyboard values, see par. 3.4.3.





## ADDRESS STAMPING

Gun Address Stamping disabled




Gun Address Stamping enabled



Cradle Address Stamping disabled



Cradle Address Stamping enabled



## ADDRESS DELIMITER

Gun Address Delimiter disabled



Gun Address Delimiter enabled



**Read 2 HEX characters  
in the range 00-FE**

Cradle Address Delimiter disabled



Cradle Address Delimiter enabled



**Read 2 HEX characters  
in the range 00-FE**

For more details, see par. 3.4.3.

# BATTERY CHARGING

PARAMETER	DEFAULT
OM6010-R BATTERY TYPE	Auto-detect

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of the page.

2. Read configuration codes from the desired groups



= Choose only one code from each selected group

3. Read the **Exit and Save Configuration** code ONCE, available at the top of the page.



## Battery Charging



---

OM6010-R BATTERY TYPE


auto-detect



Alkaline



NiMh/NiCd



It is strongly recommended to configure the cradle with the dedicated battery type code. This will also slightly reduce charging time.

Select the Auto-detect code to charge different type battery guns with the same cradle.

# NETWORK PARAMETERS

## FOR MULTIDROP NETWORK SYSTEMS ONLY

PARAMETER	DEFAULT
<input type="text" value="ECHELON FIELDBUS"/>	disabled

---

### TO CHANGE THE DEFAULT VALUES

**1.** Read the **Enter Configuration** code ONCE, available at the top of the page.

**2.** Read configuration codes from the desired groups



= Choose only one code from each selected group


**3.** Read the **Exit and Save Configuration** code ONCE, available at the top of the page.




---

**ECHELON FIELDBUS**

disabled



Master



Slave



To configure the network communications correctly, the cradle connected to the Host must be configured as the **Master** and all other cradles connected to the multidrop line must be configured as **Slaves**.

After reading the Exit and Save Configuration code, you must power the cradle(s) off and then on again for the configuration to be recognized.

# **GUN**

# **PARAMETERS**

# GUN OPERATING PARAMETERS

PARAMETERS	DEFAULT
ACK FROM HOST	disabled
RADIO TIMEOUT	1/2 sec.
SET DATE AND TIME	
TIME STAMPING FORMAT	disabled
TIME STAMPING DELIMITER	disabled
CODE IDENTIFIER	disabled


---


## TO CHANGE THE DEFAULT VALUES

**1.** Read the **Enter Configuration** code ONCE, available at the top of each page.

**2.** Read configuration codes from the desired groups



 = Choose only one code from each selected group

 = Follow the procedure given for this code group

**3.** Read the **Exit and Save Configuration** code ONCE, available at the top of each page.



# Gun Operating Parameters

## ACK FROM HOST

disabled



enabled



For more details, see par. 3.4.1

## RADIO TIMEOUT



**Read 3 numbers in the range 000-255:**

000 = disables Radio Timeout (always on).

001 to 255 = timeout from .063 to 16 seconds.

For more details about default values, see par. 3.4.2.

## SET DATE AND TIME

set time



**Read 4 numbers for HHMM**

set date



**Read 6 numbers for DDMMYY**





# Gun Operating Parameters

## TIME STAMPING FORMAT


disabled



hour/minutes/seconds  
month/day/year



hour/minutes/seconds  
day/month/year




hour/minutes/seconds



month/day/year



day/month/year



For more details, see par. 3.4.3.

## TIME STAMPING DELIMITER

disabled



select delimiter



**Read 2 HEX characters in the range 00-FE**

For more details, see par. 3.4.3.



## Gun Operating Parameters

---

### CODE IDENTIFIER

disabled



AIM standard



DATALOGIC standard






For more details, see par. 3.4.3.

# READING PARAMETERS

PARAMETERS	DEFAULT
TRIGGER SIGNAL	level
TRIGGER TIMEOUT	10 sec.
READS PER CYCLE	1
SAFETY TIME	.5 sec.
SINGLE-STORE	disabled
POWER-OFF TIMEOUT	8 hours
GOOD TRANSMISSION BEEP	enabled
BEEPER INTENSITY	high
BEEPER TONE	2

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of each page.
2. Read configuration codes from the desired groups   
 = Choose only one code from each selected group  
 = Follow the procedure given for this code group
3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.



## Reading Parameters

### TRIGGER SIGNAL

trigger active level



trigger active pulse



See par. 3.5.1 for details.

### TRIGGER TIMEOUT

auto-off timeout



**Read 2 numbers in the range 00-99:**

00 = disables the trigger timeout  
01-99 = corresponds to a max. 99 sec. delay after the trigger press before turning the laser off automatically.

See par. 3.5.2 for details.

### READS PER CYCLE

one read per cycle



multiple reads per cycle



See par. 3.5.3 for details.

### SAFETY TIME

safety time



**Read 2 numbers in the range 00-99:**

00 = no same code consecutive reading until reader is removed (no decoding) for at least 400 ms.  
01 to 99 = timeout from .1 to 9.9 seconds before a consecutive read on same code.

Limits same code consecutive reading.

See par. 3.5.4 for details.




## Reading Parameters

### SINGLE-STORE

disabled



enabled



See par. 3.5.5 for details.

### POWER-OFF TIMEOUT

power-off timeout



**Read 2 numbers in the range 00-99:**

- 00 = disables power-off
- 01 - 99 = delays from 1 to 99 hours before implementing power-off

See par. 3.5.6 for details.

### GOOD TRANSMISSION BEEP

disabled



enabled





## Reading Parameters



---

### BEEPER INTENSITY

beeper off



medium intensity



low intensity



high intensity



---

### BEEPER TONE

tone 1



tone 3



tone 2



tone 4




# DECODING PARAMETERS

PARAMETERS	DEFAULT
<input type="checkbox"/> INK SPREAD	enabled
<input type="checkbox"/> OVERFLOW CONTROL	enabled
<input type="checkbox"/> INTERDIGIT CONTROL	enabled
<input type="checkbox"/> DECODING SAFETY	one read

**CAUTION**  
Before changing these parameter values  
read the descriptions in par. 3.6.

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of each page.
2. Read configuration codes from the desired groups   
 = Choose only one code from each selected group
3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.



## Decoding Parameters

---

### INK-SPREAD

disabled



enabled



See par. 3.6.1 for details.

---

### OVERFLOW CONTROL

disabled



enabled



See par. 3.6.2 for details.

---

### INTERDIGIT CONTROL

disabled



enabled



See par. 3.6.3 for details.

---





## Decoding Parameters



---

DECODING SAFETY

one read



(decoding safety disabled)

two reads



three reads



four reads



Required number of good reads before accepting code.




# GUN DISPLAY PARAMETERS



PARAMETERS	DEFAULT
DISPLAY FONT SIZE	small
DISPLAY TIMEOUT	8 sec.
DISPLAY BACKLIGHT	off
DISPLAY CONTRAST	normal
DISPLAY MODE	normal

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of each page.
2. Read configuration codes from the desired groups   
 = Choose only one code from each selected group  
 = Follow the procedure given for this code group
3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.



## Gun Display Parameters

---

### DISPLAY FONT SIZE

small font (6 x 8)



16 x 4 characters on display

medium font (8 x 8)



12 x 4 characters on display

large font (12 x 16)



8 x 2 characters on display

---

### DISPLAY TIMEOUT

timeout



**Read 2 numbers in the range 00-99:**

00 = disables Display Timeout (always on).  
01 to 99 = timeout from 1 to 99 seconds.

---

### DISPLAY BACKLIGHT

backlight off



backlight on






## Gun Display Parameters


---

### DISPLAY CONTRAST

lighter



darker



Read the code until the desired contrast is reached.

---

### DISPLAY MODE

Normal



Clear display after decode



Local echo




For further details, see par. 3.7.1.

# CODE SELECTION

PARAMETERS	DEFAULT
<input checked="" type="checkbox"/> EAN/UPC FAMILY	<b>EAN 8/EAN13 UPC A/UPC E</b> check digit transmitted no conversions
<input checked="" type="checkbox"/> 2/5 FAMILY	<b>Interleaved 2/5</b> check digit control and transmission variable length code: 4-99 characters
<input checked="" type="checkbox"/> CODE 39 FAMILY	<b>Standard Code 39</b> no check digit control variable length code: 1-99 characters
<input checked="" type="checkbox"/> CODE 128 FAMILY	<b>Code 128</b>
<input type="checkbox"/> CODE 93	not enabled
<input checked="" type="checkbox"/> CODABAR FAMILY	not enabled

---

## TO CHANGE THE DEFAULT VALUES

1. Read the **Enter Configuration** code ONCE, available at the top of each page.
2. Read configuration codes from the desired groups   
 = Choose only one code from each selected group  
 = Follow the procedure for this code group
3. Read the **Exit and Save Configuration** code ONCE, available at the top of each page.



## Code Selection


---

DISABLES ALL CODE FAMILIES



### NOTE

The reader allows up to 5 code selections. This does not limit the number of CODES enabled to 5, as it depends on the code family:

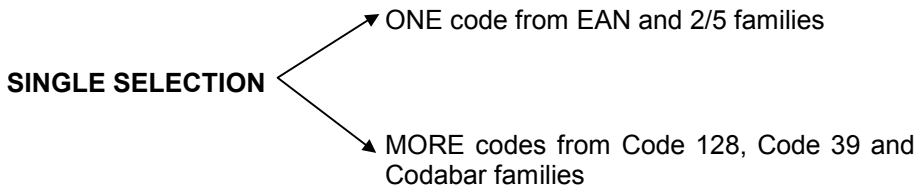

### Example

5 code selections:

1. **2/5 Interleaved**
2. **2/5 Industrial**
3. Code 128 + EAN 128
4. Code 39 Full ASCII + Code 32
5. **UPC A/UPC E**

In this section all **SINGLE** code selections are **underlined and in bold.**



# Code Selection

## EAN/UPC FAMILY

disables the family



Read a single code or combination code selection

EAN 8



EAN 13



UPC A



UPC E



EAN 8/EAN 13/UPC A/UPC E  
with and without ADD ON



WITHOUT ADD ON

EAN 8/EAN 13/UPC A/UPC E



EAN 8/EAN 13



UPC A /UPC E



WITH ADD ON

EAN 8/EAN 13/UPC A/UPC E



EAN 8/EAN 13



UPC A /UPC E





## Code Selection

---

### EAN/UPC CHECK DIGIT TX SELECTIONS

For each code type in this family you can choose to transmit the check digit or not


EAN 8



EAN 13




check digit transmission



UPC A



no check digit transmission



UPC E







## Code Selection

---

### CONVERSION OPTIONS


UPC E to UPC A conversion



UPC E to EAN 13 conversion




UPC A to EAN 13 conversion



EAN 8 to EAN 13 conversion




enable only ISBN conversion




enable only ISSN conversion



enable both ISBN and ISSN conversion



disable both ISBN and ISSN conversion





## Code Selection


### 2/5 FAMILY

disables the family




① Read the desired family code

#### Interleaved 2/5



#### Normal 2/5 (5 Bars)



#### Industrial 2/5 (IATA)



#### Matrix 2/5 (3 Bars)



② Read a check digit selection

no check digit control



check digit control and  
transmission



check digit control  
without transmission



The pharmaceutical code below is part of the 2/5 family but has no check digit nor code length selections.

#### Code CIP/HR



French pharmaceutical code

③ Read **4** numbers  
for the code length where:

**First 2 digits** = minimum code length.

**Second 2 digits** = maximum code length.

The maximum code length is 99 characters.

The minimum code length must always be less than or equal to the maximum.

Examples:

0199 = variable from 1 to 99 digits in the code.

1010 = 10 digit code length only.



# Code Selection


## CODE 39 FAMILY

disables the family




- ① Read the desired family code

### Standard Code 39



### Full ASCII Code 39



The pharmaceutical codes below are part of the Code 39 family but have no check digit selections.

### Code CIP39



French pharmaceutical code

### Code 32



Italian pharmaceutical code

- ② Read a check digit selection

## CHECK DIGIT TABLE

no check digit control



check digit control and transmission



check digit control without transmission



## CODE LENGTH (optional)

The code length selection is valid for the entire Code 39 family.

set code length



Read **4** numbers for the code length where:

**First 2 digits** = minimum code length.

**Second 2 digits** = maximum code length.

The maximum code length is 99 characters. The minimum code length must always be less than or equal to the maximum.

Examples:

0199 = variable from 1 to 99 digits in the code.

1010 = 10 digit code length only.



## Code Selection

### CODE 128 FAMILY

disables the family



#### Code 128



control without transmission of check digit

#### EAN 128



control without transmission of check digit

### DEFINE EAN 128 SEPARATOR CHARACTER

Code EAN 128 uses a special character to separate a variable length code field from the next code field. The standard value of this character (from code EAN 128 specifications) is ASCII <GS> which is not useful for the Wedge and RS232 interface.

For this reason it can be modified by the user:

GS substitution character



After selecting the code, read one character from the HEX table.

Valid range of characters = **00-9B**

### EAN 128 SEPARATOR CHARACTER

GS substitution character disabled



GS substitution character enabled





## Code Selection

---

### ADD FIRST GS IN EAN 128

disabled



enabled



---

CODE 93

disables the code



Code 93



control without transmission of check digit



## Code Selection

### CODABAR FAMILY


disables the family



For Standard Codabar:

① Read the desired equality control code

#### Standard Codabar



no start/stop character equality control

#### Standard Codabar



start/stop character equality control

② Read a start/stop transmission selection

no transmission



transmission



The Codabar ABC code below uses a fixed start/stop character transmission selection.

#### Codabar ABC



no start/stop character equality control  
but transmission.

### CODE LENGTH (optional)

The code length selection is valid for the entire Codabar family.

set code length



Read **4** numbers for the code length where:

**First 2 digits** = minimum code length.

**Second 2 digits** = maximum code length.

The maximum code length is 99 characters. The minimum code length must always be less than or equal to the maximum.

Examples:

0199 = variable from 1 to 99 digits in the code.

1010 = 10 digit code length only.


## 3 REFERENCES

### 3.1 RS232 PARAMETERS

#### 3.1.1 Handshaking

##### Hardware handshaking (RTS/CTS)


The RTS line is activated by the decoder before transmitting a character. Transmission is possible only if the CTS line (controlled by the Host) is active.

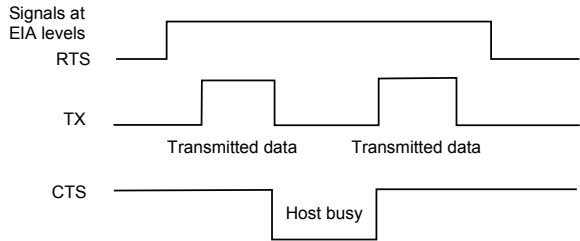

**RTS/CTS handshaking**

##### Software handshaking (XON/XOFF)

During transmission, if the Host sends the XOFF character (13 Hex), the decoder interrupts the transmission with a maximum delay of one character and only resumes when the XON character (11 Hex) is received.

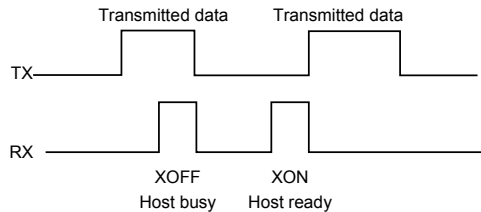

**XON/XOFF handshaking**

#### 3.1.2 Radio RX Lock

This parameter is used to control radio reception from the guns to the cradle when the Host uses either RTS/CTS or XON/XOFF Handshaking.

If enabled, this command blocks radio reception to the cradle when the Host has interrupted RS232 data communication (CTS low or XOFF). The effect is that guns cannot send data to the cradle until the Host resumes data communication (CTS high or XON). This is similar to FIFO buffering

disabled, where data can be collected only when communication is possible. In any case, prior to interruption, data is buffered in the cradle.

This command is only effective if handshaking is enabled. If used in a Multidrop Network, it only works for the Master cradle.

If disabled, guns continue to send data to the cradle which buffers them even if data communication has been interrupted by the Host (CTS low or XOFF). If the buffer becomes full, the gun signals an error and any further data is discarded until communication is restored. This is similar to FIFO enabled where data collection continues even though communication is interrupted.

### 3.1.3 RX Timeout

The timeout in data reception can be used to automatically end data reception after the specified period of time. If no character is received from the Host, after the timeout expires, any incomplete string (any string not terminated by <CR>) is flushed from the Cradle receive buffer and if being configured, the Cradle exits configuration mode.

## 3.2 WEDGE PARAMETERS

### 3.2.1 IBM AT - Alt Mode Interface

The IBM AT - Alt Mode interface allows barcodes sent to the PC to be interpreted correctly independently from the Keyboard nationality used, therefore no keyboard nationality selection is required.

When selecting the IBM AT - Alt Mode interface, make sure the Num lock parameter selection matches the Num lock key status on your keyboard.

### 3.2.2 Inter-character Delay

When IBM SURE1 interface is selected, the default value for the Inter-character Delay is forced to 5 msec. With this interface no lower value can be programmed for this parameter.



## 3.3 PEN EMULATION PARAMETERS

### 3.3.1 Minimum Output Pulse

This parameter sets the duration of the output pulse corresponding to the narrowest element in the barcode. In this way the code resolution is controlled by the signal sent to the decoder, independently of the physical resolution of the code read.

The shortest pulse (200  $\mu$ s) corresponds to a high resolution code emulation and therefore a shorter transfer speed to the decoder (for decoders able to work on high resolution codes). Likewise, longer pulses correspond to low resolution code emulation and therefore a longer transfer time to the decoder.


### 3.3.2 Overflow

This parameter generates a white space before the first bar and after the last bar of the code. The selections are as follows:

- narrow = space 10 times the minimum output pulse.
- medium = space 20 times the minimum output pulse.
- wide = space 30 times the minimum output pulse.

### 3.3.3 Output and Idle Levels

The following state diagrams describe the different output and idle level combinations for Pen emulation:

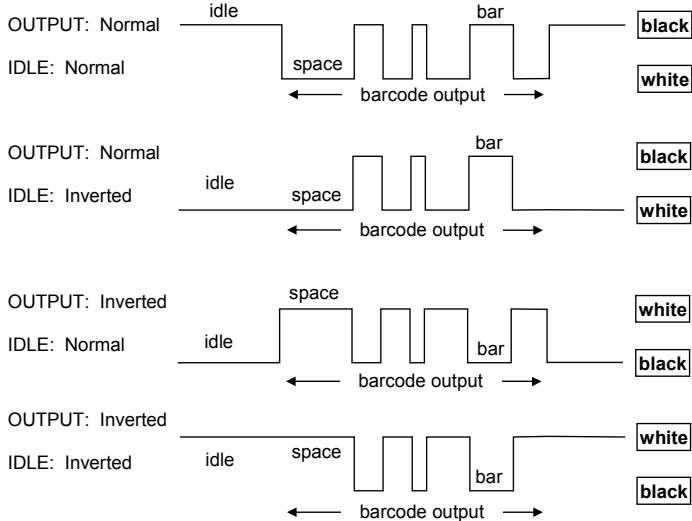

Output and Idle Levels

## 3.4 CRADLE AND GUN OPERATING PARAMETERS

### 3.4.1 ACK from Host

If enabled, an acknowledgement string from the Host to the gun signals that the message has been received correctly.

### 3.4.2 Radio Timeout

After a code has been read and transmitted, the radio remains active for the amount of time set by the Radio Timeout parameter. This is particularly useful when the Host is expected to send a reply message to the gun. This parameter depends heavily on the application and is therefore provided here for system optimization according to your application.

The default value for this parameter is 008 (about 1/2 sec.). This is a reasonable value for most applications, but it could need to be changed according to the following considerations:

- If your application does not require the host to send messages to the gun(s), (which is true for all Wedge applications), the best setting for the radio timeout is the minimum value 001, which is about 1/16 of a second. This allows maximum battery autonomy.
- When your application requires bi-directional communications, the radio timeout must be set according to the number of guns and the amount of traffic so that no messages are lost.

#### NOTE

Setting the Radio Timeout to 000 causes the radio to always be ON. If you do this, the gun will accept messages from the host at any time, but the batteries will discharge quickly.

### 3.4.3 Output Data Format

The output data format towards the Host is:

[Header] [Gun\_Addr] [Gun\_Addr\_delimiter] [Cradle\_Addr] [Cradle\_Addr\_delimiter]  
[Time stamp] [Ts\_delimiter] [Code ID] **CODE** [Terminator]

[Items in square brackets are optional.]

## Header/Terminator Selection

The header/terminator selection is not effected by the reading of the restore default code.

In fact, header and terminator default values depend on the interface selection:

RS232: no header, terminator CR-LF

WEDGE: no header, terminator CR

These default values are always restored through the reading of RS232 or WEDGE interface selection code, step **10** of the System Start Up procedure.

EXTENDED KEYBOARD TO HEX CONVERSION TABLE				
HEX	IBM AT	IBM 3153	IBM XT	IBM 31xx, 32xx, 34xx, 37xx
HEX	KEY		KEY	KEY
83	ENTER		ENTER	FIELD EXIT
84	TAB		TAB	TAB
85	F1		F1	F1
86	F2		F2	F2
87	F3		F3	F3
88	F4		F4	F4
89	F5		F5	F5
8A	F6		F6	F6
8B	F7		F7	F7
8C	F8		F8	F8
8D	F9		F9	F9
8E	F10		F10	F10
8F	F11		ESC	F11
90	F12		BACKSPACE	F12
91	HOME		HOME	ENTER
92	END		END	RESET
93	PG UP		PG UP	INSERT
94	PG DOWN		PG DOWN	DELETE
95	↑		↑	FIELD -
96	↓		↓	FIELD +
97	←		←	ENTER (Paddle)
98	→		→	PRINT
99	ESC		ESC	
9A	CTRL (Right)		CTRL (Right)	
9B	Euro		Space	Space

## Gun/Cradle Address Stamping

It is possible to include the gun and cradle addresses in the message sent to the host. The Gun Address Stamping and the Cradle Address Stamping parameters consist of a 3-digit number in the range 000 to 126. For message output format, refer to the example on page 58.

## Gun/Cradle Address Delimiter

The Address Delimiters allow a character to be included to separate the Gun and Cradle Address stamping fields from the next fields in the message. Any character can be included in the hexadecimal range from 00 to FE. For message output format, refer to the example on page 58.

## Time Stamping Format

The Time Stamping parameter sets the format for hour and date information. It consists of 1 or 2 groups of numbers, each one made up of 6 decimal digits.

For example, setting the Hour/Minutes/Seconds/Month/Day/Year format, the information *17:03:16 on June 12, 2000* will be formatted as 170316061200.

## Time Stamping Delimiter

The Time Stamping Delimiter allows a character to be included to separate the Time Stamping field from the next field in the message. Any character can be included in the hexadecimal range from 00 to FE.

## Code Identifier

CODE IDENTIFIER TABLE		
CODE	DATALOGIC STANDARD	AIM STANDARD
2/5 interleaved	N	] I y
2/5 industrial	P	] X y
2/5 normal 5 bars	O	] S y
2/5 matrix 3 bars	Q	] X y
EAN 8	A	] E 4
EAN 13	B	] E 0
UPC A	C	] X y
UPC E	D	] X y
EAN 8 with 2 ADD ON	J	] E 5
EAN 8 with 5 ADD ON	K	] E 6
EAN 13 with 2 ADD ON	L	] E 1
EAN 13 with 5 ADD ON	M	] E 2
UPC A with 2 ADD ON	F	] X y
UPC A with 5 ADD ON	G	] X y
UPC E with 2 ADD ON	H	] X y
UPC E with 5 ADD ON	I	] X y
Code 39	V	] A y
Code 39 Full ASCII	W	] A y
CODABAR	R	] F y
ABC CODABAR	S	] X y
Code 128	T	] C 0
EAN 128	k	] C 1
Code 93	U	] G y
CIP/39	Y	] X y
CIP/HR	e	] X y
Code 32	X	] X y

### NOTE

AIM standard identifiers are not defined for all codes:

the X identifier is assigned to the code for which the standard is not defined,

y value depends on the selected options (check digit tested or not, check digit tx or not, etc.).

## 3.5 READING PARAMETERS

### 3.5.1 Trigger Signal

Trigger signal is useful to determine the modality of the reader ON state:

- trigger level: the reader goes ON when the trigger is pressed and goes OFF when it is released;
- trigger pulse: the reader goes ON at the first trigger press and goes OFF only at a second press.

### 3.5.2 Trigger Timeout

When this timeout is selected, the reader which is triggered ON but not decoding turns the laser OFF automatically after the desired period of time.

### 3.5.3 Reads per Cycle

A reading cycle depends on the trigger signal selection (see par. 3.5.1) and on the trigger timeout selection (see par. 3.5.2).

When one read per cycle is selected, the scanner turns off as soon as a valid code is decoded. To turn the reader on again, release and again press the trigger in case the scanner is operating in 'trigger level mode', pull the trigger if the reader is operating in 'trigger pulse mode'.

When multiple reads per cycle is selected, the scanner turns off after a good decoding for the time necessary to transmit the code and activate the beeper, then it turns on again. The scanner turns off after a trigger press according to the 'trigger signal' selection or when the timeout expires.

The Safety Time parameter can be used in this case to avoid unwanted multiple reading of the same code, see safety time below.

### 3.5.4 Safety Time

Safety time prevents the device from immediately decoding the same code more than once. Same code consecutive reading can be disabled requiring the reader to be removed from the code (no decoding) for at least 400 ms, or a timeout can be set up to 9.9 seconds before the decoder will accept the same code. Reading is immediate if the code changes.

### 3.5.5 Single-Store

When single-store mode is enabled, if the DLL6000-R fails to transmit a code to the cradle, it enters a special operating mode that prevents the user from reading barcodes. When such operating mode is entered, the trigger no longer enables barcode reading but is used to retry the transmission itself. Once the transmission is successful the gun returns to the standard mode.

Single-store may be useful if you often read codes at the limit of the coverage area and there is a chance that code transmission can fail. In such case single-store allows you to move to a more favorable position or location (i.e. closer to the cradle) and retry transmission without the necessity of re-reading the code since it is already stored in the gun.

Conversely, if single-store is disabled, and the user wants to retry transmission, the code must be read again, and therefore the attempt must be made from basically the same location. If the user gives up, he doesn't know if the transaction was successful. (Actually the transmission could have been successful but the cradle may have been unable to acknowledge the message). There are applications in which there is no risk of transmission failure. In such cases it may be better to disable single-store so that the user perceives a more consistent behavior of the trigger in that it always corresponds to code reading.

### 3.5.6 Power-Off Timeout

With Ni-MH, NiCd, or AA batteries, when this timeout is set, a gun which is left unused will power-off after the selected time. The gun will power-up again upon a trigger press. This will save battery power.

## 3.6 DECODING PARAMETERS

### CAUTION

These parameters are intended to enhance the decoding capability of the reader for particular applications. Used incorrectly, they can degrade the reading performance or increase the possibility of a decoding error.

### 3.6.1 Ink-Spread

The ink-spread parameter allows the decoding of codes which are not perfectly printed because the page texture tends to absorb the ink.



## 3.6.2 Overflow Control

The overflow control parameter can be disabled when decoding codes printed on small surfaces, which don't allow the use of an overflow space. This command does not effect code families 2/5, Code 128 and Code 93.

For the EAN/UPC code family, do not use code combinations. Each code must be selected singularly if this control is disabled.

For example, to read EAN8 and EAN13 without overflow control select two codes: EAN8 and EAN13; do not select the EAN8/EAN13 combination.

## 3.6.3 Interdigit Control

The interdigit control parameter verifies the interdigit spacing for code families Code 39 and Codabar.

## 3.7 GUN DISPLAY PARAMETERS

### 3.7.1 Display Mode

The user can control the gun display behavior according to the following selections:

**Normal mode:** When a barcode is read with the gun:

- The code is sent to the Host.
- The gun display is not cleared. Therefore if any previous data was displayed on the gun screen it remains.
- There is no Local Echo to the gun display.

**Clear Display After Decode mode:** When a barcode is read with the gun:

- The code is sent to the Host.
- The gun display is cleared. Therefore if any previous data was displayed on the gun screen it is cancelled and the screen remains blank.
- There is no Local Echo of the code to the gun display.

**Local Echo mode:** When a barcode is read with the gun:

- The code is sent to the Host.
- The gun display is cleared.
- The code is also sent to the gun display (Local Echo).
- The cursor is positioned after the last printed character on the gun display.

Host messages sent to the gun are always written to the gun display.

### 3.8 SOFTWARE RELEASE

The following codes cause the gun and the cradle to transmit the respective software release to the Host:



## 4 COMMUNICATION AND MESSAGE FORMATTING

---

The system always provides gun to host data communication using the message formatting described in par. 3.4.3.

However, if the RS232 interface is selected for communication between the Host and the OM6010-R cradle, then the following additional communications between Host and Gun can occur:

- The Host can send messages to any gun associated with that cradle to control the Gun's display, LEDs and beeper.
- The Gun can send up to 3 user-defined characters to the Host using the 3 command keys on the gun.

These communications and their relative message formatting are detailed in the following paragraphs.

### 4.1 MESSAGES FROM HOST TO GUN

The general format is:

```
[Gun_Address][Gun_Add_delimiter]<Message>CR
```

#### NOTES:

- If you have enabled the Gun Address Stamping or the Gun Address Delimiter, you **must** specify them in every message.
- If you have **not** enabled the Gun Address Stamping or the Gun Address Delimiter, you **must not** specify them. In this case all messages will be implicitly addressed to the 'binded' gun of the cradle directly connected to the serial line.
- Messages cannot start with '\$+' because they would be interpreted as a configuration command.
- You can send a message to the gun only while it is on. This happens when it has sent a message to the host and the radio timeout has not yet expired. (See par. 3.4.2, "Radio Timeout"; command is on page 32).

- If you want to control the gun's beeper from the host, you will also probably want to disable the good transmission beep that is emitted when the code is received from the cradle. (See command on page 37).

The message field can store plain text and escape sequences.

- Escape sequences are interpreted as commands.
- Plain text is directly printed on the display. If writing beyond the end of line, the display does not wrap automatically. Extra characters are ignored. Control characters are not interpreted (i.e. LF, FF, etc.).

### 4.1.1 Cursor Control

ESC [ <i>n</i> A	Up <i>n</i> rows, no scroll
ESC [ <i>n</i> B	Down <i>n</i> rows, no scroll
ESC [ <i>n</i> C	Right <i>n</i> columns
ESC [ <i>n</i> D	Left <i>n</i> columns
ESC [ G	CR
ESC [ <i>r</i> ; <i>c</i> H	Move to row <i>r</i> , column <i>c</i> (ESC[1;1H is the upper left character position of the display)
ESC D	Down 1 row, with scroll
ESC E	CR and cursor down 1 row with scroll
ESC M	Up 1 row and scroll

#### NOTE:

- Since CR is used as the message terminator, you must use ESC [ G or ESC E to print a CR.
- The cursor row position **is not** affected by the currently selected font. The display always has 4 rows, so when writing with the large font, actually two rows are written to: the current one and the one below it. You will need two ESC E commands to step from one row to the next when using the large font.
- The cursor column position **is** affected by the currently selected font. Therefore, column 6 is 36 pixels from the left border only if you last selected the 6x8 font; otherwise it could be 48 or 72 pixels from the left border.

### 4.1.2 Font Selection

<b>ESC [ 0 m</b>	Normal mode
<b>ESC [ 7 m</b>	Reverse mode
<b>ESC # 4</b>	Large font: subsequent characters are written on the current row and the row below it using the 12x16 font which allows for two rows of eight characters on the display.
<b>ESC # 5</b>	Normal font: subsequent characters are written using the 6x8 font which allows for four rows of sixteen characters on the display.
<b>ESC # 7</b>	Medium font: subsequent characters are written using the 8x8 font which allows for four rows of twelve characters on the display.

### 4.1.3 Clearing Display

<b>ESC [ 0 K</b>	From cursor position to end of line inclusive
<b>ESC [ 1 K</b>	From beginning of line to cursor position (not inclusive)
<b>ESC [ 2 K</b>	Entire line
<b>ESC [ 0 J</b>	From cursor position to end of display inclusive
<b>ESC [ 1 J</b>	From beginning of display to cursor position (not inclusive)
<b>ESC [ 2 J</b>	Entire display; moves cursor to upper left corner on display

### 4.1.4 LED and Beeper Control

<b>ESC [ 0 q</b>	Emit short High tone + short delay
<b>ESC [ 1 q</b>	Emit short Low tone + short delay
<b>ESC [ 2 q</b>	Emit long Low tone + short delay
<b>ESC [ 3 q</b>	Emit good read tone
<b>ESC [ 4 q</b>	Emit bad tx tone
<b>ESC [ 5 q</b>	Wait 100 ms
<b>ESC [ 6 q</b>	Turn on the green LED
<b>ESC [ 7 q</b>	Turn off the green LED
<b>ESC [ 8 q</b>	Turn on the red LED
<b>ESC [ 9 q</b>	Turn off the red LED

The LED control escape sequences are intended to activate the LEDs for short periods of time and can be used in combination with the Beeper. The LED and Beeper will be controlled by the system after the entire command sequence is interpreted.

#### Example:

**ESC [ 6 q ESC [ 3 q ESC [ 7 q** Turns on the green LED, emits a good read tone, and turns off the green LED.

**ESC [ 6 q ESC [ 5 q ESC [ 7 q** Turns on the green LED for 100 ms and then turns off the green LED.

### 4.1.5 Setting RTC

<b>ESC [ 0 p d d m m y y</b>	Set date to day, month, year
<b>ESC [ 1 p h h m m</b>	Set time to hours, minutes; seconds are automatically set to 00.

## 4.2 MESSAGES FROM GUN COMMAND KEYS

The DLL6000-R series guns with display have 3 command keys that can each be associated with a character to send to the host.

By pressing the keys on the gun, the associated character with its relative message formatting is sent to the Host. For example, keys can be used to select items from a menu sent to the gun display by the application program.

The general format is:

```
[Header] [Gun_Addr] [Gun_Addr_delimiter] ] [Cradle_Addr] [Cradle_Addr_delimiter]
[Time stamp] [Ts_delimiter] [Code ID] KeyID [Terminator]
```

The messages are handled by the system as if they were barcodes, that's why **KeyID** can have so many fields appended to it. If in your application there is some chance of reading a 1-char barcode identical to **KeyID**, the way you can distinguish between the two is to enable the Code ID: The **KeyID** is the only 1-character long EAN 8 code.

Refer to par. 3.4.1 for a complete description of the optional message fields in square brackets.

The default characters associated with each key (**KeyID**) are shown in the following table:

Default Key Identifiers		
	Key	KeyID
▲	(left) Key	'<'
ENTER	(center) Key	'='
▼	(right) Key	'>'

The Key Identifier values can be customized by using the configuration procedure below:

Enter  
Configuration



Key Identifier



+ **xyyzz**

where: **xx** = left-key Identifier  
**yy** = center-key Identifier  
**zz** = right-key Identifier  
**xyyzz** are hexadecimal values representing  
 ASCII characters in the range **00-FE**.  
**FF** = Key Identifier disabled.

Exit and Save  
Configuration



The keypad can be disabled by reading the following code:

Keypad disabled






## APPENDIX A HOST CONFIGURATION STRINGS

---

In this section we provide a description of how to modify the configuration using serial command strings sent from the Host.


**This method requires the RS232 interface.**

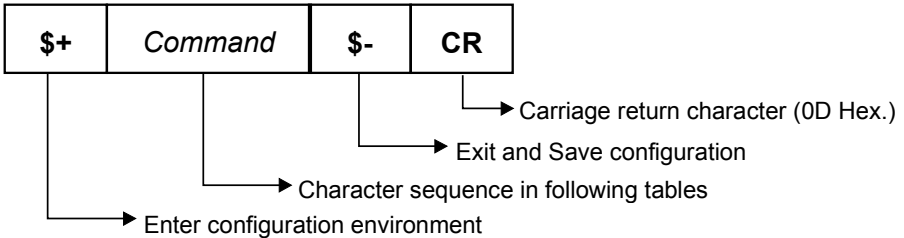

For RS232 user's, the configuration can be changed by receiving commands from the Host through the serial interface. When this method is used, the programming sequence format is the following:

**Example:**

Multiple command programming sequence:

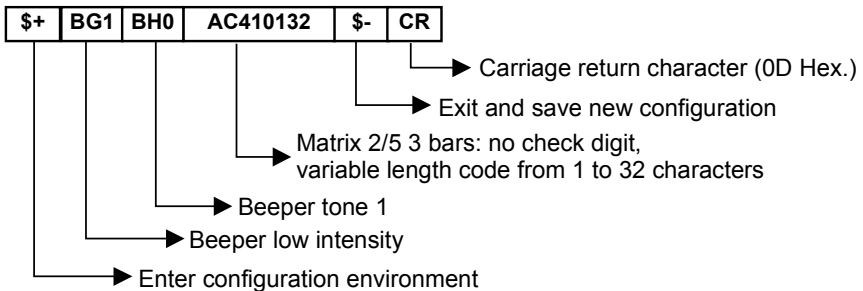

Each configuration parameter setting removes the condition previously active for that parameter.

## NOTE

The buffer can contain a maximum of 256 characters. If your programming string goes over this value, you must split it into separate groups, according to the following rules:

- all gun commands must reside in one single string;
- consecutive string transmission must occur after a delay of at least 3 seconds to give the cradle time to process each string.

Many of the following tables list gun parameters.

If you include **gun configuration commands** in your configuration string:

1. Send the string to the cradle.
2. Read the following code with the gun to be programmed:

### Get Gun Configuration from Cradle



The green LED on the gun will blink, signaling the gun has recognized the command.

3. Insert the gun into the cradle within 10 seconds. The green LED will turn off and you will hear a short beep. Now the gun has accepted the configuration.
4. If you do not turn the cradle off, you can repeat steps 2 and 3 with all the guns you want to configure with the same string.

SERIAL CONFIGURATION STRINGS	
CONFIGURATION COMMANDS	
DESCRIPTION	STRING
Restore factory default configuration	\$*
Transmit the Cradle Software release	#!

The above commands do not require \$- to exit.

### Cradle Parameters

INTERFACE SELECTION	
DESCRIPTION	STRING
RS232 interface	CP0
PEN emulation interface	CP6
WEDGE for IBM AT	CP500
for IBM AT – Alt Mode	CP507
for IBM XT	CP503
for IBM SURE1	CP506
for IBM Terminal 3153	CP504
for IBM Terminals 31xx, 32xx, 34xx, 37xx; make-break keyboard	CP501
for IBM Terminals 31xx, 32xx, 34xx, 37xx; make only keyboard	CP502

RS232 PARAMETERS		
DESCRIPTION	STRING	
Baud rate	150	CD0
	300	CD1
	600	CD2
	1200	CD3
	2400	CD4
	4800	CD5
	9600	CD6
	19200	CD7
Parity	Disabled	CC0
	Even	CC1
	Odd	CC2
Data bits	7	CA0
	8	CA1
	9	CA2
Stop bits	1	CB0
	2	CB1
Handshaking	Disabled	CE0
	RTS/CTS	CE1
	XON/XOFF	CE2
	RTS always ON	CE3
Radio RX lock	Disabled	EC1
	Enabled	EC0
Inter-character Delay	CK00 - CK99	
RX Timeout	CL00 - CL99	

WEDGE PARAMETERS		
DESCRIPTION		STRING
Keyboard Type for IBM Terminals 31xx, 32xx,34xx, 37xx:	Typewriter	FK0
	Advanced	FK1
Keyboard Nationality	English	FJ4
	French	FJ2
	German	FJ3
	Italian	FJ1
	Swedish	FJ5
	USA	FJ0
	Spanish	FJ6
	Belgian	FJ7
	Japanese	FJ8
	Russian (Latin)	FJ9
	Russian (Cyrillic)	FJA
	Hungarian	FJB
	Yugoslavian	FJC
	Romanian	FJD
Czechoslovakian	FJE	
Caps Lock	Caps Lock ON	FE1
	Caps Lock OFF	FE0
Num Lock	Num Lock unchanged	FL1
	Toggle Num Lock	FL0
Inter-character Delay		CK00 - CK99
Inter-code Delay		FG00 - FG99
Control Character Emulation	Ctrl+Shift+Key	FO0
	Ctrl+Key	FO1

PEN PARAMETERS		
DESCRIPTION		STRING
Conversion to Code 39 and Code 128	Conversion to Code 39	DA1
	Conversion to Code 128	DA2
Operating mode	Interpret (does not require \$+ or \$-)	\$]
	Transparent (does not require \$+ or \$-)	\${
Output level	Normal	DD0
	Inverted	DD1
Idle level	Normal	DE0
	Inverted	DE1
Minimum output pulse	200µs	DG0
	400µs	DG1
	600µs	DG2
	800µs	DG3
	1 ms	DG4
	1.2 ms	DG5
Overflow	Narrow overflow	DH0
	Medium overflow	DH1
	Wide overflow	DH2

<b>CRADLE OPERATING PARAMETERS</b>		
<b>DESCRIPTION</b>		<b>STRING</b>
Headers	No header	EA00
	One character	EA01x
	Two characters	EA02xx
	Three characters	EA03xxx
	Four characters	EA04xxxx
Terminators	No terminator	EA10
	One character	EA11x
	Two characters	EA12xx
	Three characters	EA13xxx
	Four characters	EA14xxxx
Address stamping	Gun Address stamping enabled	HU1
	Gun Address stamping disabled	HU0
	Cradle Address stamping enabled	HU3
	Cradle Address stamping disabled	HU2
Address delimiter	Gun Address delimiter select	HV1y
	Gun Address delimiter disabled	HV0
	Cradle Address delimiter select	HY1y
	Cradle Address delimiter disabled	HY0

x = a HEX value representing the ASCII character from 00 to 9B Hex.

y = a HEX value in the range from 00 to FE representing the ASCII character.

<b>BATTERY CHARGING</b>		
<b>DESCRIPTION</b>		<b>STRING</b>
OM6010-R Battery selection	Autodetect	HT0
	Alkaline battery	HT1
	NiMh or NiCd battery	HT3

<b>MULTIDROP NETWORK PARAMETERS</b>		
<b>DESCRIPTION</b>		<b>STRING</b>
Echelon fieldbus	Disabled	HW0
	Slave	HW1
	Master	HW2

## Gun Parameters

<b>GUN OPERATING PARAMETERS</b>		
<b>DESCRIPTION</b>		<b>STRING</b>
Code Identifier	Disabled	EB0
	Datalogic standard	EB1
	AIM standard	EB2

GUN OPERATING PARAMETERS (continued)		
DESCRIPTION		STRING
Time Stamping Format	Disabled	HL0
	Hour/minutes/seconds/month/day/year	HL1
	Hour/minutes/seconds/day/month/year	HL2
	Hour/minutes/seconds	HL3
	Month/day/year	HL4
	Day/month/year	HL5
Time Stamping Delimiter	Disabled	HM0
	Select delimiter	HM1y
ACK from Host	Disabled	HO4
	Enabled	HO5
Radio Timeout	Tout (range is 000 to 255)	HH000-HH255
Set Time		HD <hhmm< h=""></hhmm<>
Set Date		HE <del>dd</del> mmyy

y = a HEX value in the range from 00 to FE representing the ASCII character.

hhmm, ddmmyy = ASCII numbers.

READING PARAMETERS		
DESCRIPTION		STRING
Trigger Signal	Level	BA0
	Pulse	BA1
Trigger Timeout		BD00 - BD99
Reads Per Cycle	One read	BC0
	Multiple reads	BC1
Safety Time		BE00 - BE99
Single-Store	Disabled	HO2
	Enabled	HO3
Power-Off Timeout		HPxx
Beeper Intensity	Beeper off	BG0
	Low intensity	BG1
	Medium intensity	BG2
	High intensity	BG3
Beeper Tone	Tone 1	BH0
	Tone 2	BH1
	Tone 3	BH2
	Tone 4	BH3
Good Transmission Beep	Disabled	HO0
	Enabled	HO1

xx = ASCII numbers in the range 00 - 99.

DECODING PARAMETERS		
DESCRIPTION		STRING
Ink-Spread	Disabled	AX0
	Enabled	AX1
Overflow Control	Disabled	AW1
	Enabled	AW0
Interdigit Control	Disabled	AV0
	Enabled	AV1
Decoding Safety	One read	ED0
	Two reads	ED1
	Three reads	ED2
	Four reads	ED3

GUN DISPLAY PARAMETERS		
DESCRIPTION		STRING
Display Font Size	Small	HA0
	Medium	HA1
	Large	HA2
Display Timeout		HB00-HB99
Display Backlight	Disabled	HC0
	Enabled	HC3
Display Contrast	Lighter	HO7
	Darker	HO6
Display Mode	Normal	HJ0
	Local Echo	HJ1
	Clear display after decode	HJ2
Keypad Setting	Disabled keypad	HK0
	Key Identifier	HK1xxyyzz

xx = left-key Identifier  
 yy = center-key Identifier  
 zz = right-key Identifier

xxyyzz are hexadecimal values representing ASCII characters in the range 00-FE.  
 FF = Key Identifier disabled.

CODE SELECTION			
DESCRIPTION		STRING	
Disable ALL family codes		AZ0	
EAN/UPC	Disable EAN/UPC family		
	EAN 8	AA0	
	EAN 13	AA2	
	UPC A	AA9	
	UPC E	AAF	
	EAN 8/EAN 13/UPC A/UPC E	without ADD ON	AAE
		with ADD ON	AA1
		with and without ADD ON	AA5
	EAN 8/EAN 13	without ADD ON	AA8
		with ADD ON	AA3
	UPC A/UPC E	without ADD ON	AA6
		with ADD ON	AA4
	EAN 8 check digit transmission	disabled	AA7
		enabled	AAG0
	EAN 13 check digit transmission	disabled	AAG1
		enabled	AAH0
	UPC A check digit transmission	disabled	AAH1
		enabled	AAI0
	UPC E check digit transmission	disabled	AAI1
		enabled	AAJ0
	Conversions	UPC E to UPC A	AAJ1
		UPC E to EAN 13	AAA
		UPC A to EAN 13	AAB
		EAN 8 to EAN 13	AAC
	ISBN Conversions	Enable ISBN	AAD
		Enable ISSN	AP1
		Enable ISBN and ISSN	AP2
Disable ISBN and ISSN		AP3	
Code 39	Disable Code 39 family		
	Standard	no check digit control	AP0
		check digit control and transmission	AB0
		check digit control without transmission	AB11
	Full ASCII	no check digit control	AB12
		check digit control and transmission	AB13
		check digit control without transmission	AB21
	CIP/39		AB22
	Code 32		AB23
	Code length (max 99)		AB3
		AB4	
		AB*xxxx	

xxxx = ASCII numbers that define the code length where:

- First 2 digits = minimum acceptable code length.
- Second 2 digits = maximum acceptable code length.

The minimum code length must always be less than or equal to the maximum which is 99 for all codes.

**Examples**

- 0199 = variable length from 1 to 99 digits in the code.
- 1010 = 10 digit code length only.



<b>CODE SELECTION (continued)</b>			
<b>DESCRIPTION</b>		<b>STRING</b>	
2/5	Disable Code 2/5 family		AC0
	Interleaved 2/5 <i>(max code length 99)</i>	no check digit control	AC11xxxx
		check digit control and transmission	AC12xxxx
		check digit control without transmission	AC13xxxx
	Normal 2/5 5 bars <i>(max code length 99)</i>	no check digit control	AC21xxxx
		check digit control and transmission	AC22xxxx
		check digit control without transmission	AC23xxxx
	Industrial 2/5 (IATA) <i>(max code length 99)</i>	no check digit control	AC31xxxx
		check digit control and transmission	AC32xxxx
		check digit control without transmission	AC33xxxx
	Matrix 2/5 3 bars <i>(max code length 99)</i>	no check digit control	AC41xxxx
		check digit control and transmission	AC42xxxx
check digit control without transmission		AC43xxxx	
	CIP/HR	AC5	
Codabar	Disable Codabar family		AD0
	Standard	no start/stop character equality control nor transmission	AD11
		no start/stop character equality control but transmission	AD112
		start/stop character equality control but no transmission	AD121
		start/stop character equality control and transmission	AD122
	ABC CODABAR	no start/stop character equality control but transmission	AD212
	Code length <i>(max 99)</i>		AD*xxxx
Code 128	Disable Code 128 family		AI0
	Code 128		AI11
	EAN 128		AI21
	Define EAN 128 separator character		EPa
	EAN 128 separator character	disable	Aa0
		enable	Aa1
	Add GS before code	disable	EQ0
enable		EQ1	
Code 93	Disable Code 93 family		AK0
	control without transmission of check digit		AK1

**a** = : Hex value from **00** to **9B**

**xxxx** = ASCII numbers that define the code length where:

- First 2 digits = minimum acceptable code length.
- Second 2 digits = maximum acceptable code length.

The minimum code length must always be less than or equal to the maximum which is 99 for all codes.

**Examples**

- 0199 = variable length from 1 to 99 digits in the code.
- 1010 = 10 digit code length only.

## APPENDIX B C6010 CONFIGURATION

---

It is possible to configure the C6010 for the battery type to charge using any gun.

1. Read one of the following labels:



The green LED on the gun will blink, signaling the gun has accepted the command.


2. Insert the gun into the cradle within 10 seconds. The LED turns off and a short beep is emitted.

---

## APPENDIX C HEX AND NUMERIC TABLE

---

**OPEN THIS PAGE TO READ THE DESIRED  
HEX AND NUMERIC SELECTIONS**

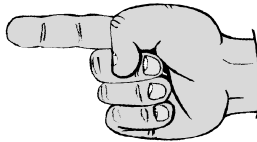

CHARACTER TO HEX CONVERSION TABLE					
char	hex	char	hex	char	hex
NUL	00	*	2A	U	55
SOH	01	+	2B	V	56
STX	02	,	2C	W	57
ETX	03	-	2D	X	58
EOT	04	.	2E	Y	59
ENQ	05	/	2F	Z	5A
ACK	06	0	30	[	5B
BEL	07	1	31	\	5C
BS	08	2	32	]	5D
HT	09	3	33	^	5E
LF	0A	4	34	~	5F
VT	0B	5	35	a	60
FF	0C	6	36	b	61
CR	0D	7	37	c	62
SO	0E	8	38	d	63
SI	0F	9	39	e	64
DLE	10	:	3A	f	65
DC1	11	;	3B	g	66
DC2	12	<	3C	h	67
DC3	13	=	3D	i	68
DC4	14	>	3E	j	69
NAK	15	?	3F	k	6A
SYN	16	@	40	l	6B
ETB	17	A	41	m	6C
CAN	18	B	42	n	6E
EM	19	C	43	o	6F
SUB	1A	D	44	p	70
ESC	1B	E	45	q	71
FS	1C	F	46	r	72
GS	1D	G	47	s	73
RS	1E	H	48	t	74
US	1F	I	49	u	75
SPACE	20	J	4A	v	76
!	21	K	4B	w	77
"	22	L	4C	x	78
#	23	M	4D	y	79
\$	24	N	4E	z	7A
%	25	O	4F	{	7B
&	26	P	50		7C
'	27	Q	51	}	7D
(	28	R	52	~	7E
)	29	S	53	DEL	7F
		T	54		

HEX / NUMERIC TABLE



Backspace



Cancels an incomplete configuration sequence



**90ACC1855**