

Inductive Proximity Sensor

E2Q4

Square Proximity Sensor

- Slim, compact size
- M12 Plug-in connection
- Integrated short circuit and reverse polarity protection
- Active face positioning:
Y-axis 15°, X-axis 90° increments



Ordering Information

DC type

Sensing distance	Connection	Active face	Output		
				NO	NO + NC
20 mm shielded	Plug-in connector	Changable	NPN	E2Q4-N20E1-M1	E2Q4-N20E3-M1
			PNP	E2Q4-N20F1-M1	E2Q4-N20F3-M1
30 mm non-shielded			NPN	E2Q4-N30ME1-M1	E2Q4-N30ME3-M1
			PNP	E2Q4-N30MF1-M1	E2Q4-N30MF3-M1
40 mm non-shielded			NPN		E2Q4-N40ME3-M1
			PNP		E2Q4-N40MF3-M1

Rating/performance

Item	Model	shielded	non-shielded	
		E2Q4-N20□□-M1	E2Q4-N30M□□-M1	E2Q4-N40M□3-M1
Sensing distance Sn		20 mm ± 10%	30 mm ± 10%	40 mm ± 10%
Standard target size, L x W x H, Fe 37		60 x 60 x 1 mm	90 x 90 x 1 mm	120 x 120 x 1 mm
Setting distance		0 to 16,2 mm	0 to 24,3 mm	0 to 32,4 mm
Switching frequency		150 Hz		
Sensing object		Ferrous metals		
Differential travel		15% max. of sensing distance Sn		
Operating voltage		10 to 30 VDC		
Current consumption		20 mA max.		
Control output	Type	E2Q4-N□□□E1-□□: NPN - NO E2Q4-N□□□E3-□□: NPN - NO + NC E2Q4-N□□□F1-□□: PNP - NO E2Q4-N□□□F3-□□: PNP - NO + NC		
	Load	200 mA max.		
	On-stage voltage drop	3 VDC max. (at 200 mA load current)		
Circuit protection		Reverse polarity, output short circuit		
Indicator		Operating indicator (yellow LED), operating voltage (green LED)		
Ambient temperature		Operating: -25° to 70°C		
Ambient humidity		35 to 95% RH		
Influence of temperature		± 10% max. of Sn at 23° in temperature range of -25° to 70°C		
Dielectric strength		1.500 VAC, 50/60 Hz for 1 min. between current carry parts and case		
Electromagnetic compatibility EMC		EN 60947-5-2		
Vibration resistance		10 to 55 Hz, 1 mm amplitude according IEC 60068-2-6		
Shock resistance		Approx. 30 G for 11 ms according to IEC 60068-2-27		
Protection degree		IEC 60529 IP 67		
Connection	Connector	M12 plug, 4 pins		
Material	Case	PBT		
	Sensing face	PBT		
Approvals		 		

Output Circuit Diagramm

NPN output


Model	Operation mode	Timing chart	Output circuit
E2Q4-N20E1-M1 E2Q4-N30ME1-M1	NO		<p>Connector Pin Arrangement</p> <p>Note: Terminal 2 is not used</p>
E2Q4-N20E3-M1 E2Q4-N30ME3-M1 E2Q4-N40ME3-M1	NO + NC		<p>Connector Pin Arrangement</p>

PNP output

Model	Operation mode	Timing chart	Output circuit
E2Q4-N20F1-M1 E2Q4-N30MF1-M1	NO		<p>Connector Pin Arrangement</p> <p>Note: Terminal 2 is not used</p>
E2Q4-N20F3-M1 E2Q4-N30MF3-M1 E2Q4-N40MF3-M1	NO + NC		<p>Connector Pin Arrangement</p>

Dimensions (Unit:mm)

E2Q4-...-M1 type

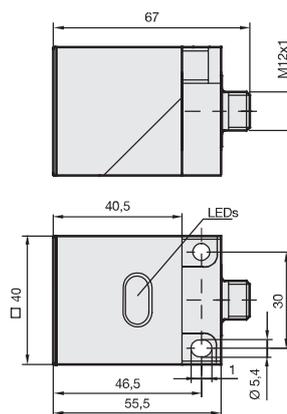


Connection

DC type

Connection type	Method	Description
AND (serial connection)		<p>The Sensors connected together must satisfy the following conditions:</p> $i_L + (N-1) \times i \leq \text{Upper-limit of control output of each Sensor}$ $V_S - N \times V_R \geq \text{Load operating voltage}$ <p> N = No. of Sensors V_R = Residual voltage of each Sensor V_S = Supply voltage i = Current consumption of the Sensor i_L = Load current </p> <p>If the MY Relay, which operate at 24 VDC, is used as a load for example, a maximum of two Proximity Sensors can be connected to the load.</p>
OR (parallel connection)		<p>A minimum of three Sensors with current outputs can be connected in parallel. The number of Sensors connected in parallel varies with the Proximity Sensor model.</p>


Precautions

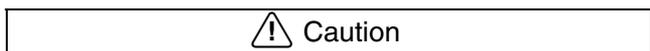

Power supply

Do not impose an excessive voltage on the E2Q2, otherwise it may explode or burn.

Do not connect an AC power supply to any DC model. If AC power (100 VAC or more) is supplied to the sensor, it may explode or burn.

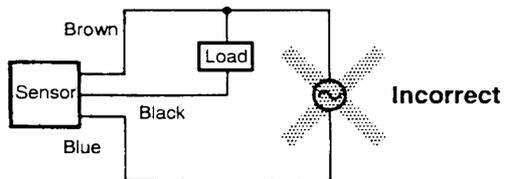

Be sure to abide by the following precautions for the safe operation of the Sensor.

Wiring

Power Supply Voltage and Output Load Power Supply Voltage

Make sure that the power supply to the Sensor is within the rated voltage range. If a voltage exceeding the rated voltage range is supplied to the Sensor, it may explode or burn.

Load Short-circuiting

Do not short-circuit the load, otherwise the Sensor may be damaged.

Connection without Load

Do not connect the power supply to the Sensor with no load connected, otherwise the internal elements may explode or burn.

Operating Environment


Do not use the Sensor in locations with explosive or flammable gas.

Correct Use

Design

Effects of Surrounding Metal

Provide a minimum distance between the Sensor and the surrounding metal as shown in the table below.

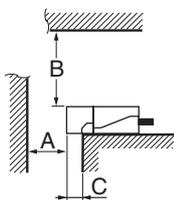


Effects of Surrounding Metal (Unit: mm)

Model	Length	A	B	C
E2Q4-N20□□-M1		45	0	0
E2Q4-N30M□□-M1		90	250	30
E2Q4-N40M□□-M1		120	300	40

Mutual Interference

If more than one Sensor is located in parallel, ensure to maintain enough space between adjacent Sensors to suppress mutual interference as provided in the following diagram.

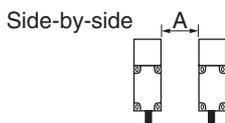

Mutual Interference (Unit: mm)

Model	Length	A
E2Q4-N20□□-M1		40
E2Q4-N30M□□-M1		120
E2Q4-N40M□□-M1		150

Power Reset Time

The Sensor is ready to operate within 300 ms after the Sensor is turned ON. If the load and Sensor are connected to independent power supplies respectively, be sure to turn ON the Sensor before supplying power to the load.

Power OFF

The Proximity Sensor may output a pulse signal when it is turned OFF. Therefore, it is recommended that the load be turned OFF before turning OFF the Proximity Sensor.

Power Supply Transformer

When using a DC power supply, make sure that the DC power supply has an insulated transformer. Do not use a DC power supply with an auto-transformer.

Sensing Object

The sensing distance of the Proximity Sensor vary with the

metal coating on sensing objects.

Wiring

High-tension cables

Wiring through Metal Conduit:

If there is power or high-tension line near the cable of the Proximity Sensor, wire the cable through an independent metal conduit to prevent against Proximity Sensor damage or malfunction.

Mounting

Mounting the Sensor

The Proximity Sensor must be subjected to excessive shock with a hammer when it is installed, otherwise the Proximity Sensor may be damaged or lose its water-resistivity.

Maintenance and Inspection

Periodically perform the following checks to ensure stable operation of the Proximity Sensor over a long period of time.

- Check for mounting position, dislocation, looseness or distortion of the Proximity Sensor and sensing objects.
- Check for loose wiring and connections, improper contacts and line breakage.
- Check for attachment or accumulation of metal powder or dust.
- Check for abnormal temperature conditions and other environmental conditions.

Never disassemble or repair the Sensor.

Environment

Water Resistivity

Do not use the Proximity Sensor underwater, outdoors or in the rain.

Operating Environment

Be sure to use the Proximity Sensor within its operating ambient temperature range and do not use the Proximity Sensor outdoors so that its reliability and life expectancy can be maintained. Although the Proximity Sensor is water resistive, a cover to protect the Proximity Sensor from water or water-soluble machining oil is recommended so that its reliability and life expectancy can be maintained.

Do not use the Proximity Sensor in an environment with chemical gas (e.g., strong alkaline or acid gasses including nitric, chromic and concentrated sulfuric acid gasses).

Inrush Current

A load that has a large inrush current (e.g., a lamp or motor) will damage the Proximity Sensor, in this case connect the load to the Proximity Sensor through a Relay

Cat. No. D02E-EN-01

In the interest of product improvement, specifications are subject to change without notice.

OMRON EUROPE B.V.

Wegalaan 67-69
NL-2132 JD Hoofddorp
Tel.: +31(0)23 568 13 00
Fax: +31(0)23 568 13 88

Printed in Germany
1003